

Instruction booklet

TUMBLE DRYER

Contents

Important Information, 2

Installation, 3-4

- Where to put your dryer
- Electrical connection
- Before you start using your dryer

Dryer Description, 5

- The front
- The back
- Control Panel

The Display, 6

Start and Programmes, 7-12

- Choosing a Programme
- Start and Programmes
- The Controls

Laundry, 13-14

- Sorting your laundry
- Wash care labels
- Special clothing items
- Drying times

Warnings and Suggestions, 15

- General safety
- Save energy and respect the environment

Maintenance and Care, 16

- Switching off the electricity
- Clean the filter after each cycle
- Check the drum after each cycle
- Cleaning the dryer

Troubleshooting, 17

Service, 18

- Spare parts
- Disposal

Hotpoint Guarantee, 19

Hotpoint After Sales Service , 20



TVF 75C

! Keep this instruction booklet on hand in order to refer to it when necessary. Take it with you when you move, and, should you sell this appliance or pass it on to another party, make sure that this booklet is supplied along with the dryer so that the new owner may be informed about warnings and suggestions on how the dryer works.

! Read these instructions carefully; the following pages contain important information on installation and suggestions on how the appliance works.



This symbol reminds you to read this booklet.




Important Information

TD4112FUV Issue 1

For your Venting dryer to operate efficiently, you must follow the regular maintenance schedule shown below:

Fluff Filter – You must Clean the fluff filter after every drying cycle



GB
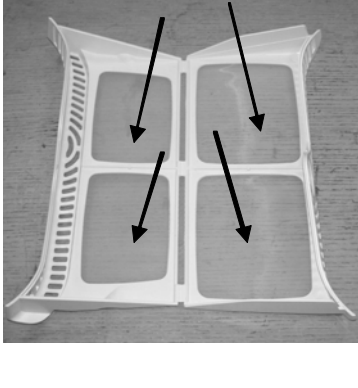
| | | |
|---|--|---|
| <p>Step 1 Open the door of your dryer</p> | <p>Step 2 Pull out the filter (using the two finger grips)</p> | <p>Step 3 Open the filter and clean any fluff deposits from the filter mesh.</p> |
|  |  |  |

TD4112FUV_1.JPG

TD4112FUV_2.JPG

TD4199HC_3.JPG
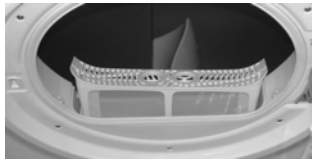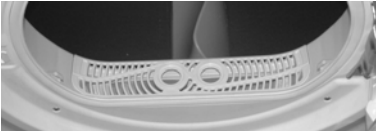
| | |
|---|---|
| <p>Step 4 Refit the filter, with the curved side toward you.</p> | <p>Step 5 Making sure the filter is pushed fully home- – Never run the dryer without a filter.</p> |
|  |  |

TD4112FUV_3.JPG

TD4112FUV_2.JPG

Failure to clean the filter after every cycle will affect the drying performance of your machine – It will take longer to dry and as a result will use more electricity during drying

You must Clean the Fluff Build Up around the filter housing and the vent tube periodically every two or three months

- Periodically check the vent tube and any permanent venting fixture to make sure that there has been no accumulation of fluff or lint, and remove it.
- Remove lint that collects around filter and the outlet vents


Installation

TD4001FAUS Issue 1

Where to put your dryer

GB

- Place your dryer at a distance from gas ranges, stoves, heaters, or cook tops because flames can damage the appliance.
- If you are going to install the appliance under a work counter, be sure to leave a 10 mm space between the top and any other objects on or above the machine and a 15 mm space between the sides and lateral furnishings or walls. This is to ensure proper air circulation. Make sure that the back vents are not obstructed

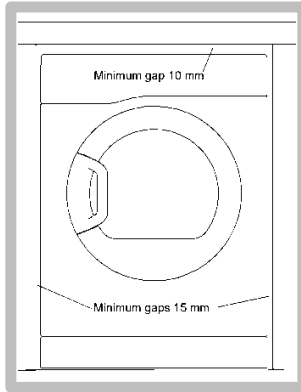

- Make sure you put your dryer in an environment that is not damp and has proper air circulation throughout. The dryer will not operate efficiently in an enclosed space or cupboard.

! We do not recommend that the dryer be installed in a cupboard because dangerous levels of heat can build ! The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer door in such a way that a full opening of the tumble dryer door is restricted.

Ventilation

This Dryer dries your laundry by drawing in cool, clean and relatively dry air, heating it, and then distributing it through the clothes as they are gently tumbled. For optimum performance, the moist air is then blown out through a vent tube behind the dryer. When the dryer is in use, there has to be adequate ventilation to avoid a back flow of gases into the room from appliances burning other fuels, including open fires.

Mobile venting


A vent tube must always be fitted when the dryer is used in conjunction with Mobile venting. The tube must be fitted securely into the back of the dryer (see *Dryer Description*). If possible, it is always best to connect the tube to a permanent vent close to the dryer. If permanent installation is not possible, the dryer will work just as well with the tube passing through a partly-opened window.

! Ensure that the end of the tube is not directed toward the air intake vent at the rear of the dryer.

! The vent tube should not exceed 2,4 m in length, and should be kept free of any possible accumulation of fluff, lint, and water by shaking it out frequently. Always ensure that the tube is not squashed.


Permanent venting

In conjunction with the vent tube we recommend using a Wall/Window Vent Kit, available at a retail location or the nearest Spare Parts Dealer:

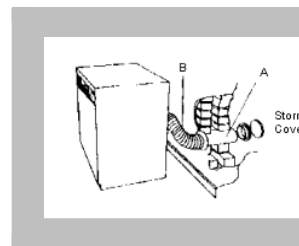

Wall mounting

1. Leave an opening in the wall to the left of dryer's intended position.
2. Keep the tube as short and straight as possible to prevent condensed moisture from backing up into the dryer.
3. Similarly, the duct in the wall should slope downwards towards the outside.

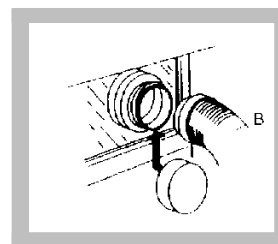


Window mounting

1. With a stacked dryer the hole in the window should ideally be made below the vent.
2. The tube should be kept as short as possible.

Depending upon how often you use your dryer, it is essential that areas A and B are checked periodically to remove lint or debris. The vent tube adaptor must be fitted securely thus preventing any humid air from being emitted back into the room.

! The Dryer should not be pushed so far back that the tube adaptor is pulled out of position or the tube is squashed or bent.

! The tube should be kept clear of the air intake vent and kinks or 'U' bends must be avoided as these will obstruct the tube and trap condensation.

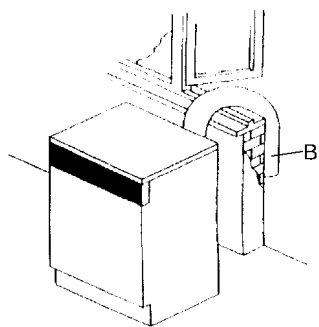

Open window venting

The end of the tube should be directed downwards to prevent warm and moist air from condensing in the room or in the dryer.

! Ensure that the dryer is adequately ventilated and that the end of the vent tube is not directed towards the air intake duct.

! The vent tube must always be fitted for optimum performance.

! Make sure that the vent tube and air intake vents are not obstructed or blocked.

! The dryer must not recycle exhaust air.

! Misusing a tumble dryer may create a fire hazard.

! Do not discharge exhaust air into a flue which is used for exhaust fumes from other appliances that burn gas or other fuels.

! Do not discharge the exhaust air into an extraction system or any duct with an extractor fan. This will affect the way the thermal controls operate and can result in a fire hazard.

Electrical connection

Make sure of the following before you insert the plug into the electrical socket:

- The socket must be grounded.
- The socket must be able to sustain the machine's maximum power, which is indicated on the rating label (see *Dryer Description*).
- Power voltage must be within the values indicated on the rating label (see *Dryer Description*).
- The socket must be compatible with the dryer's plug. Should this not be the case, replace the plug or the socket.

! The dryer must not be installed outdoors, even if the space is sheltered. It can be very dangerous if exposed to rain or storms.

! Once installed, the dryer's electrical wire and plug must be within reach.

TD4002AUS Issue 2

! Do not use extension cords

! The power cord must not be bent or squashed.

! The power cord should be checked periodically and replaced by a cord specially prepared for this dryer and fitted only by authorised technicians. (see *Service*). New or longer power cords are supplied at an extra charge by authorised dealers.


! Ensure that any portable outlet or extension lead is positioned so that it is not subjected to any splashing or ingress of moistures

! The manufacturer denies any responsibility should any of these rules not be followed.

! If in doubt about any of the above consult a qualified electrician

Levelling your dryer

The dryer must be installed level for correct operation. When you have installed your dryer in its final location check that it is level first side-to-side, then front to back.

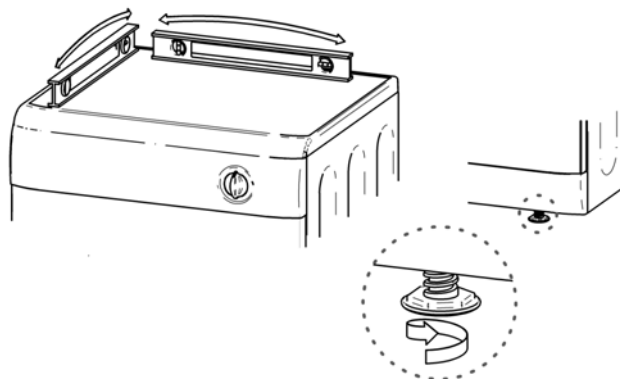

If the dryer is not level, use a wooden block to support it while adjusting the two front legs up or down until your dryer is level.

Before you start using your dryer

Once you've installed your dryer and before you use it, clean the inside of the drum to remove any dust that could have accumulated during transportation.


GB

Dryer Description


TD4233FUV Issue 2

The front


GB

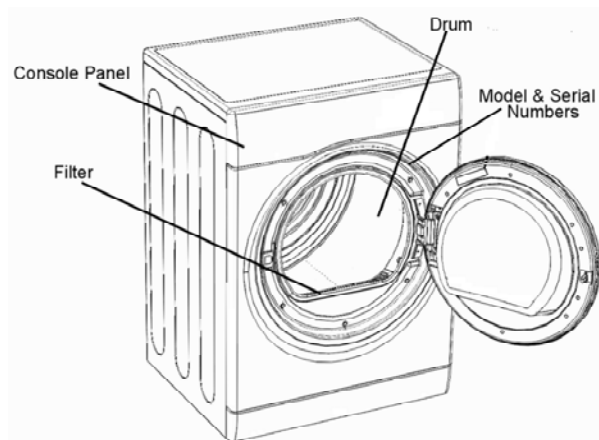


The back

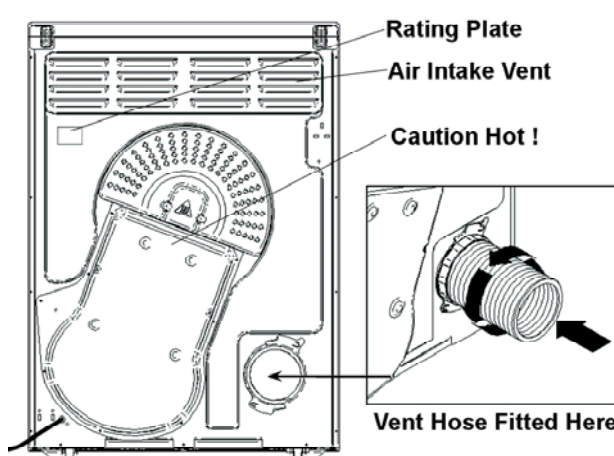


Control Panel

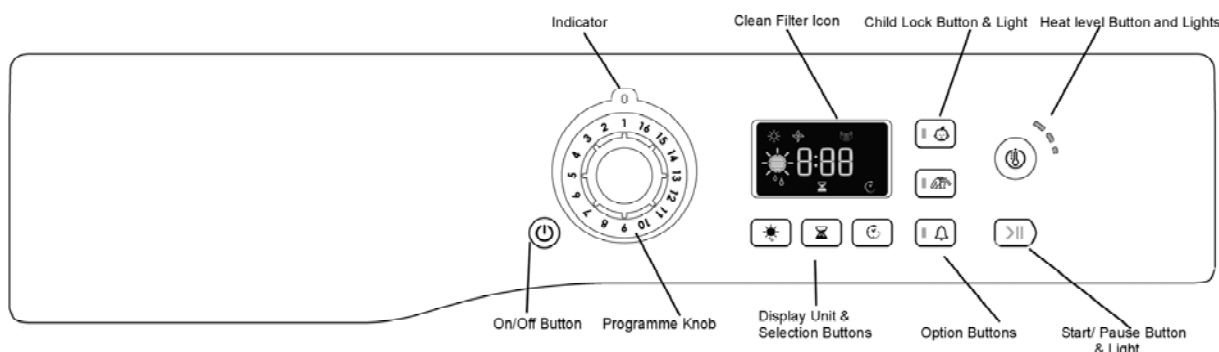

The **ON/OFF** button , if the dryer is running and this button is pressed and held for more than 3 seconds the dryer is turned off, **its counts down 3, 2, 1 Off, the programme is then cancelled.** Press **and hold for more than 3 seconds** and the dryer **reactivates**.


The **PROGRAMMES** knob sets the programme: rotate until the indicator is pointing to the programme you want to select (see *Start and Programmes*).


The **OPTION** buttons/ lights select available options for your selected programme. The lights indicate that the option has been selected. If an option is not available the buzzer will beep three times. (see *Start and Programmes*).

The **START/PAUSE** button/light  starts a selected programme. When you press this button there will be one beep and the progress lights will flash to confirm the action. When a programme is running holding this button in pauses the programme and stops the dryer. The light is green when a programme is running, flashing amber if the programme has been paused and flashing green if on standby waiting

to start a Programme.(see *Start and Programmes*). **Note** :This light also flashes amber during the Post Care phase of a programme

The **Display Unit** gives an indication of the drying or delay time together with icons that light to give warning information and the status of your programmes progress. The three buttons below the display select Automatic or timed dry and if required a delayed start. (see *Start and Programmes* or *The Display*)

The **Clean Filter** Icon  gives a reminder before every programme, that it is essential to clean the filter every time the dryer is used (see *Maintenance and Care*).

The **Child Lock** button/ light.  Press and hold his button after selecting your programme and any options, the light turns on. This prevent the programme settings from being changed. When the light is lit, the other buttons are disabled. Hold the button to cancel and the light will go out.

The Display TD4158FUH Issue 2

The Display has three main functions each with its corresponding button



Dryness Sensing Levels

After selecting a programme that has a Sensing Dry Option, press and release the button until the required dryness sensing level is displayed. If the sensing option is not available the display will flash and the buzzer beeps three times.

! Some sensing programmes do not have all five dryness level options
Dryness levels available



Damp Dry: Dries your items ready to be ironed using a machine or rotary ironer.



Iron Dry: Dries you items ready to be ironed with a hand iron.



Hanger Dry: Dries you clothes ready to be hanged for final drying; Use this program if you do not need the items to be fully dry as it uses less Energy.



Cupboard Dry: Dries your items ready to be put away.



Extra Dry: Dries your clothes ready to be worn.

Timed Dry



After selecting a Programme that has a Timed Dry Option, press the Timed Button and the Timed Dry Icon will light, the display will reduce the selected time each time you press and release this button (see *Start and Programmes*). Each programme that has a timed option has different times available and the selection of **up to 11** drying times will also depends on the heat setting that you have selected

Each press of the button decreases the drying time.

If you change your mind, press the sensing button and sensing level options are available.


If the Timer Dry option is not available the timer icon will flash and the buzzer beeps three times.

The selected time remains displayed after the programme starts and can be changed during the programme if you wish.


Delay Timer




After selecting a Programme that has a Delay Timer Option a delay start time can be selected.


Each press of the Delay button  advances the delay setting in 30 minutes increments from **0:30** to **9:30** and then Increments from **10:00** to **24:00** then **0:00** and then after five seconds cancels the delay.

For delays of 10 hours or more the display counts down the time in hours until 10 hours, then the display shows **9:59** and then counts down in minutes. For delays 9 hours or less the display shows hours and minutes and then counts down in minutes for all of the delay.

After the Start/Pause Button  is pressed the delay time can be changed or cancelled.

When the delay period finishes the  symbol is off and the **Time to End** is displayed

Time to End

If the delay icon  is off the time displayed is the **Time to End** of the programme running.

When timed programmes are selected the time displayed throughout the cycle is the actual time remaining.

When an Automatic programme is selected the time displayed is an estimate of the time remaining.

When the programme is selected the display shows the time required to dry a full load, after around 10 minutes the controller calculates a better estimate of the cycle time **and this is updated during the programme.**

The time to end is displayed in hours and minutes and counts down each minute.

The colons between the hours and minutes display flashes to show that the time is counting down.

The Display also shows if there is a problem with your dryer, if this occurs the display will show F followed by a fault code number, the three option lights and the pause light will also flash Orange. (see *Troubleshooting*).

Start and Programmes

TD4234FUV Issue 5



Choosing a Programme

1. Plug the dryer into the electrical socket.
2. Sort your laundry according to fabric type (see *Laundry*).
3. Open the door and make sure the filter is clean and in place (see *Maintenance*).
4. Load the machine and make sure that the items are not in the way of the door seal. Close the door.
5. If none of the lights are On, press the On/Off Button
6. Choose a programme by checking the Programmes guide (see *Programmes*) as well as the indications for each type of fabric (see *Laundry*).; - select a programme by rotating the PROGRAMME knob.
7. Choose Timed Drying or Dryness Levels option.
If Timed Drying press and release Timed button until time required is displayed. Or
To change from default dryness setting press and release Sensor Dry button until required level is indicated (see *The Display*)
8. Set a delay time and other options if necessary.
9. The START/PAUSE light is flashing green, press the START/PAUSE button to begin. The green light stops flashing.

During the drying programme, you can check on your laundry and take out the items that are dry while the others continue drying. When you close the door again, press START/PAUSE button in order to resume drying (When the door is open the START/PAUSE light will flash Amber and after door is closed and START/PAUSE button pressed will stop flashing and show green. **Note:** during the Post Care phase this light flashes Amber)

10. At the end of the drying cycle the display shows END and either:

The buzzer will beep 3 times to let you know that your programme is complete. (Note: If the SOUND option was selected the buzzer beeps 3 times every 30 seconds for 5 minutes)..

Or;

If you have selected the Crease Care option and you do not take the clothes out immediately the clothes will tumble occasionally for 10 hours or until you open the door, the buzzer will then beep 3-times to confirm the programme is completed.

11. Open the door, take your laundry out, clean the filter and replace it. (see *Maintenance*).
12. Unplug the dryer.

Note: This tumble dryer, in compliance with new energy saving regulations, is fitted with an automatic standby system which is enabled after about 30 minutes if no activity is detected. Press and hold the **ON-OFF** button until the dryer reactivates.

Essential Programmes - Programmes Table

| Programme | Options Available | | | | | Dryness Levels Available (default highlighted) | | | | |
|------------------------|-------------------|---|--------------|------------------------|---|--|---|---|---|---|
| | | | | | | | | | | |
| 1 Cottons | ✓ | ✓ | High, | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| | | | Medium Low | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 2 Shirts | ✓ | ✓ | High, Medium | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | x |
| | | | Medium | x | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 3 Bed & Bath | ✓ | ✓ | High, | x | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| | | | Medium | x | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| 4 Synthetics | ✓ | ✓ | Medium Low | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | x |
| 5 Cottons Quick Dry | ✓ | ✓ | x | An Automatic Programme | | | | | | |
| 6 Synthetics Quick Dry | ✓ | ✓ | x | An Automatic Programme | | | | | | |

*You cannot select both Crease Care and Sound Options

Cottons

- This is a programme for Cotton Items.
- The duration of this programme will take will depend on the size of the load, the dryness setting selected and the spin speed used in your washer. (see *The Laundry*)

Bed & Bath

- This is a programme for Cotton Towels and sheets
- The duration of this programme will depend on the size of the load, the dryness setting selected and the spin speed used in your washer. (see *The Laundry*)
- Loads dried using the Extra Dry setting are usually ready to use; the edges or seams may be slightly damp especially on large items. If this is found try opening them out and running the programme again for a short period.

Start and Programmes

TD4235FUV Issue 4

GB

Essential Programmes



Shirts

 
High heat option

- This is a programme for Shirts made from Cotton.
- It can be used for load sizes up to 3 kg (approximately 10 shirts).
- The duration of this programme will depend on the size of the load the dryness setting selected and the spin speed used in your washer

Medium heat option

- This is a programme for Shirts made from synthetic materials or a mixture of natural and synthetics materials such as Polyester and Cotton.
- It can be used for load sizes up to 3 kg (approximately 14 shirts).
- The duration of this programme will depend on the size of the load the dryness setting selected and the spin speed used in your washer

Loads dried using the Cupboard Dry setting are usually ready to wear; the edges or seams may be slightly damp. If this is found try turning the shirts inside out and running the programme again for a short period



Synthetics

- This is a programme for items of Synthetic or Synthetic / Cotton mixtures.
- The duration of this programme will depend on the size of the load, the dryness setting selected and the spin speed used in your washer. (see *The Laundry*)



Quick Dry Cottons

This programme is for small loads made from Cottons, maximum 1 kg. Your drying time is very much reduced with a huge time saving up to 53%.



Quick Dry Synthetics

This programme is for small loads made from synthetics, maximum 1 kg. Your drying time is very much reduced with a huge time saving up to 50%.

Exclusive Programmes - Programmes Table

| Programme | Options Available | | | | | | Dryness Levels Available (default highlighted) | | | | |
|------------------------------|-------------------|---|---|---|------------------------|---|--|---|---|---|---|
| | | | | | | | | | | | |
| 7 Jeans | ▼ | ▼ | * | x | x | ▼ | ▼ | ▼ | ▼ | ▼ | ▼ |
| 8 Wool | x | x | ▼ | x | An Automatic Programme | | | | | | |
| 9 Silk | x | x | ▼ | x | x | ▼ | ▼ | ▼ | ▼ | ▼ | x |
| 10 Delicates (e.g. Acrylics) | ▼ | ▼ | * | x | ▼ | ▼ | ▼ | ▼ | ▼ | ▼ | x |
| 11 Lingerie | ▼ | ▼ | * | x | x | ▼ | ▼ | ▼ | ▼ | ▼ | x |
| 12 BabyCycle | ▼ | ▼ | * | x | x | ▼ | ▼ | ▼ | ▼ | ▼ | x |

*You cannot select both Crease Care and Sound Options




Jeans

- This is a programme for Jeans made from Denim Cotton. Before drying your Jeans turn the front pockets inside out.
 - It can be used for load sizes up to 3 kg (approximately 4 pairs).
 - Do not mix dark and light coloured items.
 - It can also be used on other garments made from same material such as jackets.
 - The duration of this programme will depend on the size of the load, the dryness setting selected and the spin speed used in your washer.
 - Loads dried using the Extra dry setting are usually ready to wear; the edges or seams may be slightly damp. If this is found try turning the jeans inside out and running the programme again for a short period.
- ! We do not recommend that you use this programme if your jeans have elastic waist bands, studs or embroidery.

Start and Programmes

TD4236FUV Issue 2

Wool Programme

- This is a programme for tumble dryer safe garments marked with the symbol 
- It can be used for load sizes up to 1 kg (approximately 3 sweaters).
- We recommend that garments are turned inside out before drying.
- This programme will take about 60 minutes, but may take longer depending on the size and density of the load and the spin speed used in your washer.
- Loads dried using this programme are usually ready to wear, but on some heavier garments the edges may be slightly damp. Allow these to dry naturally as over-drying could damage garments.

! Unlike other materials, the mechanism of wool shrinkage is irreversible; i.e. it will not stretch back to original size and shape.

! This program is not suitable for Acrylic garments

Silk

- This is a programme for drying your Delicate Silk.
- It can be used for load sizes up to 0.5 kg.
- The duration of this programme will depend on the size of the load, the dryness setting selected and the spin speed used in your washer
- Loads dried using the Cupboard Dry setting are usually ready to use, but on some heavier garments the edges may be slightly damp. If this is found try removing the load and open them out then run the programme again for a short period.

Delicates

- This is a programme for drying your Delicate Clothes i.e. Acrylics.
- It can be used for load sizes up to 2 kg.
- The duration of this programme will depend on the size of the load, the dryness setting selected and the spin speed used in your washer.
- Loads dried using the Cupboard Dry setting are usually ready to use, but on some garments may be slightly damp. If this is found try removing the load and open them out or turn inside out then run the programme again for a short period.

Lingerie

- This is a programme for drying your very delicate lingerie including silk.
- It can be used for load sizes up to 1 kg, close all hooks, buttons or zip before drying.
- The duration of this programme will depend on the size of the load, the dryness setting selected and the spin speed used in your washer.

Loads dried using the Cupboard Dry setting are usually ready to use, but on some garments may be slightly damp. If this is found try removing the load and open them out or turn inside out then run the programme again for a short period

Baby Programme

- This is a programme for drying your baby's small delicate items of clothing and bedding (Cotton and Chenille) and for drying your Delicate Clothes.
- Do not dry items such as bibs and nappy pants with plastic coverings.
- It can be used for load sizes up to 2 kg.
- The duration of this programme will depend on the size of the load, the dryness setting selected and the spin speed used in your washer.

Loads dried using the Cupboard Dry setting are usually ready to use, but on some garments may be slightly damp. If this is found try removing the load and open them out or turn inside out then run the programme again for a short period

Start and Programmes

TD4237FUV Issue 3

Extra Programmes - Programmes Table

| Programme | Options Available | | | | | | Dryness Levels Available | | | | |
|-----------------|-------------------|-------------|-------|------------|------------------------|------------|--------------------------|----------|------------|--------------|-----------|
| | | | | | | | | | | | |
| | Delay Timer | Crease Care | Sound | Heat Level | Timed Dry | Sensor Dry | Damp Dry | Iron Dry | Hanger Dry | Cupboard Dry | Extra Dry |
| 13 Cuddly Toys | ✓ | x | ✓ | x | An Automatic Programme | | | | | | |
| 14 Heat & Enjoy | x | x | x | x | An Automatic Programme | | | | | | |
| 15 Easy Iron | x | x | ✓ | x | An Automatic Programme | | | | | | |
| 16 Refresh | x | x | ✓ | x | An Automatic Programme | | | | | | |

Cuddly Toy Programme

With the cuddly toy programme you can remove dust easier and wash the cuddly toys more often because the drying time is very much reduced compared to drying in the open air. It's a delicate drying cycle that dries at low temperature and with soft mechanical action to maintain at best the original look and the shine of the fur.

Note: For allergy protection, just freeze for 24hrs your cuddly toys, wash and dry. Repeat every 6 weeks. Before drying remove accessories such as clothes, collars or sound boxes and protect plastic eyes with masking tape, after drying them with a cloth. The programme time will vary dependant on the exact make up of the load. The maximum load should not exceed 2.5 kg and no individual item should be greater than 600 g

Heat & Enjoy

This programme helps to heat towels & bathrobes for a warm sensation after a bath or shower. It is also useful for warming clothes before dressing during winter. The cycle heats clothes to 37°C (Body Temperature) and runs at this temperature for a maximum of 4 hours or until you stop the cycle by opening the door. Maximum load 3 kg.

During this programme a icon rotates in the display until the temperature target is reached at which point the dryness level icon flashes.

Easy Iron Programme

Easy Iron is a short 10 minute programme (8 minutes of heat followed by a 2 minute cool tumble period) which fluffs the fibres of clothing that has been left in the same position/location for an extended period of time. The cycle relaxes the fibres and makes them easier to iron and fold. ! Easy Iron is not a drying programme and should not be used for wet articles of clothing.

For best results:

1. Do not load more than maximum capacity.

These numbers refer to dry weight

| | |
|-----------------------|-----------|
| Fabric: | Max load: |
| Cotton and Cotton mix | 2.5 kg |
| Synthetics | 2 kg |
| Denim | 2 kg |

2. Unload the dryer immediately after the end of the drying cycle, hang, fold or iron the articles and put them away in the closet. Should this not be possible, repeat the programme

The Easy Iron effect varies from one fabric to the next. It works very well on traditional fabrics like Cotton or Cotton mix, and less well on acrylic fibres and on materials such as Tencel.®

Refresh

! Airing is not a drying programme and should not be used for wet articles of clothing.

- It can be used on any load size but is more effective on smaller loads.
- Do not overload your dryer (see Laundry)

20-minute programme that airs your clothes with cool air. Use also to cool warm clothes

Start and Programmes

TD4239FUV Issue 4

The Controls

• Programmes knob

! **Warning**, if after pressing the start button the programme knob position is changed, the new position will **NOT** change the programme selected. To change programme press Start/Pause Button >|| to pause the programme, the light flashes Amber to indicate the programme is paused. Select the new programme and any options required, the light will then flash green. Press the Start/Pause Button >|| and the new programme will start.

• Option Buttons/ Lights

These buttons are used to customise the selected programme to your requirements. A programme must have been selected on the Programmes knob before an option can be selected. Not all options are available for all programmes (see *Start and Programmes*). If an option is not available and you press the button, the buzzer will beep three times. If the option is available the option light in the button lights to confirm your selection.

After the start switch has been pressed were available only the Crease Care or Sound options (were available) can be changed.

• Progress (☀️ Drying, 🌀 Cool tumble), Icons

These are part of the Display unit they indicate the progress of the dryer each one comes on as the corresponding phase starts.

• Time Delay 🕒

The start of some programmes (see *Start and Programmes and The Display*) can be delayed for up to 24 hours.

👤 Crease care

The pre-care option is only available if a delayed start has been selected. It tumbles the clothes occasionally during the delayed period to help prevent creases developing. The post-care option occasionally tumbles the clothes after the end of the drying and cool tumble cycles to help prevent creases developing, should you not be available to remove the load immediately the programme is complete. The Display shows **End**, the Crease care and the Start/Pause Lights flash Amber. during this phase. Selecting this option enables both the pre and post care functions if appropriate and when selected the light in the button is on.

Note: If you have selected the Sound option this option is not available.

🔔 Sound

If selected gives a signal at the end of the drying cycle to remind you that the clothes are ready to be removed. Not available on Heat & Enjoy programme.

Note: If you have selected the Crease care option this option is not available.

• 🌡️ Heat Level Button and Lights

Not all programmes allow you to change the heat level, and some of these programmes do allow all three heat level options. When the option change the heat level is available pressing this button changes the heat level selected and the corresponding light is lit for the three available levels, Low, Medium and High.

DISPLAY 0:00

The display shows either the amount of time delay remaining or an indication of the amount of time left for a drying programme. (see *The Display*) The Colons between the hours and minutes display flash to show that the time is counting down.

When the programme finishes its cool tumble phase the display will show **End**.

• Door Opening

Opening the door (or pressing the Start/Pause Button >||) during a programme will stop the dryer and have the following effects.. Note: The Start/Pause Light flashes Amber during Post Care phase of a programme.

- The Start/Pause Light flashes Amber.
- The start button >|| must be pressed to resume the programme including a delayed start. The progress lights will then change to show the current status and the Start/Pause light will stop flashing and turn green
- During a delay phase the delay will continue to count down...
- During the drying part of a programme, the time to end count continues but the colons do not flash.
- During the post care part of a drying program, the programme will finish. Pressing the start/pause button will re-start a new programme.
- Changing the Programmes knob will select a new programme and the Start/Pause Light will flash green. You can use this to select the Refresh programme 🔄 to cool the clothes if you find them dry enough. Press the start button >|| to begin new Programme
- **Note**
If you have a power cut, switch off the power or remove the plug. When power is restored, press and hold the **On/Off button** until the dryer reactivates, then press the Start/Pause button.

Laundry

TD4003NC7 Issue 1

Sorting your laundry

- Check symbols on clothing labels to make sure that the articles can be tumble dried
- Sort laundry by fabric type.
- Empty pockets and check buttons.
- Close zippers and hooks and tie loose belts and strings
- Wring out each item in order to eliminate as much excess water as possible.

! Do not load dripping wet clothes into the dryer

Maximum load

Do not load more than maximum capacity.

These numbers refer to dry weight:

Natural fibres: 7 kg max (15 lb)

Synthetic fibres: 3 kg max (6.6 lb)

! Do not overload the dryer as this could result in reduced drying performance.

Typical weights

Note: 1kg = 1000g; (1 lb = 16 oz.)

| Clothes | | |
|------------|--------|--------------------|
| Blouse | Cotton | 150g (5 oz) |
| | Other | 100g (3 oz) |
| Dress | Cotton | 500g (1lb 2 oz) |
| | Other | 350g (12 oz) |
| Jeans | | 700 g (1 lb 6 oz) |
| 10 Nappies | | 1000 g (2 lb 6 oz) |
| Shirt | Cotton | 300g (10 oz) |
| | Other | 200g (7 oz) |
| T - Shirt | | 125 g (4 oz) |


| Household items | | |
|----------------------|--------|-------------------|
| Duvet cover (Double) | Cotton | 1500g (3 lb 5 oz) |
| | Other | 1000g (2 lb 3 oz) |
| Large Tablecloth | | 700 g (1 lb 6 oz) |
| Small Tablecloth | | 250 g (9 oz) |
| Tea Towel | | 100 g (3 oz) |
| Bath Towel | | 700 g (1 lb 6 oz) |
| Hand Towel | | 350 g (12 oz) |
| Double Sheet | | 500 g (1 lb 2 oz) |
| Single Sheet | | 350 g (12 oz) |


At the end of a drying cycle, cottons could still be damp if you grouped cottons and synthetics together. If this happens simply give them an additional short period of drying.


Note: The last 10 minutes of any time set is the Cool Tumble so allow for this when setting the time, as this period will not dry your laundry.


Wash care labels

Look at the labels on your garments, especially when tumble drying for the first time. The following symbols are the most common:


 May be tumble dried.

 Do **not** tumble dry.

 Tumble dry at high heat setting.

 Tumble dry at low heat setting.

What not to tumble dry in your dryer:

- Articles that contain rubber or rubber-like materials, or plastic film (pillows, cushions, or PVC rainwear); any other flammable objects, or objects that contain flammable substances (towels soiled with hairspray).
- Glass fibres (certain types of draperies).
- Items that have been Dry Cleaned.
- Items with the ITLC code ("*Special clothing items*") . These can be cleaned with special at-home dry cleaning products. Follow instructions carefully.
- Large bulky items (quilts, sleeping bags, pillows, cushions, large bedspreads, etc.). These expand when drying and would prevent airflow through the dryer.



Special clothing items

Blankets and bedspreads: acrylic items (Acilan, Courtelle, Orion, Dralon) must be dried with special care on a low heat setting. Avoid drying for a long period of time.

Pleated or creased garments: read manufacturers drying instructions on the garment.

Starched articles: do not dry these items with non-starched items. Make sure that as much of the starch solution is removed from the load as possible before placing it in the dryer. Do not over-dry: the starch will become powdery and leave your clothing limp, which defeats the purpose of starch.

Drying times

The table below presents APPROXIMATE drying times in minutes. Weights refer to dry garments:

| | | | | | | |
|---|-------|-------|-------|--------|--------|--------|
| Cottons | | | | | | |
| High (Full) Heat | | | | | | |
| Drying times 800-1000 rpm in washing machine | | | | | | |
| 1 kg | 2 kg | 3 kg | 4 kg | 5 kg | 6 kg | 7kg |
| 20-30 | 35-45 | 45-60 | 60-70 | 70-80 | 80-100 | 90-120 |
| Synthetics | | | | | | |
| High (Full) Heat | | | | | | |
| Drying times on reduced spin in washing machine | | | | | | |
| 1 kg | | 2 kg | | 3 kg | | |
| 20-40 | | 30-50 | | 40-70 | | |
| Delicates (e.g. Acrylics) | | | | | | |
| Gentle (Low) Heat | | | | | | |
| Drying times on reduced spin in washing machine | | | | | | |
| 1 kg | | | | 2 kg | | |
| 50-70 | | | | 90-130 | | |
| | | | | | | |

TD4020K7 issue 2

Times are approximate and can vary depending upon:


- Amount of water retained in clothes after spin cycle: towels and delicates retain a lot of water.
- Fabrics: items that have the same type of fabric but different textures and thicknesses may not have the same drying times.
- Quantity of laundry: single items or small loads may take longer to dry.
- Dryness: if you are going to iron some of your clothes, they can be taken out while still a bit damp. Others can be left longer if you need them to be completely dry.
- Heat setting.
- Room temperature: if the room where the dryer is located is cold, it will take longer for the dryer to dry your clothes.
- Bulk: some bulky items can be tumble dried with care. We suggest that you remove these items several times, shake them out, and return them to the dryer until finished.

! Do not over-dry your clothes.
All fabrics contain a little natural moisture, which keeps them soft and fluffy.

Warnings and Suggestions TD4218 Issue 1

! This appliance has been designed and built according international safety standards. These warnings are given for safety reasons and must be followed carefully.

General safety

- This tumble dryer is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This tumble dryer has been designed for home, and not professional, use.
- Do not touch the appliance while barefoot or with wet hands or feet.
- Unplug the machine by pulling on the plug, not the cord.
- Children must not be in proximity of the dryer when in use. After using the dryer, turn it off and unplug it. Keep the door closed to make sure that children do not use it as a toy.
- Children should be supervised to ensure that they do not play with the dryer.
- The appliance must be installed correctly and have proper ventilation. The air intake vents behind the machine, the outlet vents, and the vent tube should never be obstructed. (see *Installation*).
- Never direct the vent tube outlet towards the air intake at the back of the machine
- Never allow the tumble dryer to recycle exhaust air.
- Never use the dryer on carpeting where the pile height would prevent air from entering the dryer from the base.
- Check to see if the dryer is empty before loading it.
-  The back of the dryer could become very hot. Never touch it while in use.
- Do not use the dryer unless the filter is securely in place (see *Maintenance*)
- Do not overload the dryer (see *Laundry* for maximum loads).
- Do not load items that are dripping wet.
- Carefully check all instructions on clothing labels (see *Laundry*).
- Do not tumble dry large, very bulky items.
- Do not tumble dry acrylic fibres at high temperatures.
- Complete each programme with its cool tumble phase.
- Do not turn off the dryer when there are still warm items inside.
- Clean the filter after each use (see *Maintenance*).
- Do not allow lint to collect around the dryer.
- Never climb on top of the dryer. It could result in damage.
- Always follow electrical standards and requirements. (see *Installation*).
- Always buy original spare parts and accessories (see *Service*).

To minimize the risk of fire in your tumble dryer, the following should be observed

- Tumble dry items only if they have been washed with detergent and water, rinsed, and been through the spin cycle. It is a fire hazard to dry items that HAVE NOT been washed with water.
- Do not dry garments that have been treated with chemical products

- Do not tumble dry items that have been spotted or soaked with vegetable or cooking oil this constitute a fire hazard. Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as a tumble dryer. The items become warm, causing an oxidation reaction with the oil. Oxidation creates heat. If the heat cannot escape, then it can become hot enough to catch fire. Piling, stacking or soiling oil-affected items can prevent heat from escaping and so constitute a fire hazard. If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be piled in a tumble dryer they should first be washed with extra detergent – this will reduce, but not eliminate, the hazard. The cool tumble phase should be used to reduce the temperature of the items. They should not be removed from the dryer or piled or stacked while hot
- Do not tumble dry items that have previously been cleaned in or washed in, soaked in or soiled with petrol/gasoline, dry-cleaning solvents or other flammable or explosive substances. Highly flammable substances commonly used in domestic environments included cooking oil, acetone, denatured alcohol, kerosene, spot removers, turpentine, waxes and wax removers. Ensure these items have been washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Do not tumble dry items containing foam rubber (also known as latex foam) or similarly textured rubber like materials. Foam rubber materials can, when heated, produce fire by spontaneous combustion.
- Fabric softeners or similar products should not be used in a tumble dryer to eliminate the effects of static electricity unless the practice is specifically recommended by the manufacturer of the fabric softener or product.
- Do not tumble dry undergarments that contain metal reinforcements e.g. bras with metal reinforcing wires. Damage to the tumble dryer can result if the metal reinforcements come loose during drying.
- Do not tumble dry rubber, plastic articles such as shower caps or babies' waterproof covers, polythene, or paper
- Do not tumble dry rubber-backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber-coated tennis shoes.
- Remove all objects from pockets, especially lighters (risk of explosion)

! WARNING: Never stop the dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Save energy and respect the environment

- Wring out all items to eliminate excess water before tumble drying (if you use a washing machine first, select a high spin cycle). Doing this will save time and energy during drying.
- Always dry full loads - you save energy: single items or small loads take longer to dry
- Clean the filter after each use to contain energy consumption costs (see *Maintenance*).

Maintenance and Care


GB

Switching off the electricity


Unplug the dryer when not using it, when cleaning it, and during maintenance activities.

Clean the filter after each cycle

The filter is an important part of your dryer: it accumulates lint and fluff that is formed while drying. Small items could also become trapped in the filter. When finished drying, therefore, clean the filter by rinsing it under running water or with your vacuum cleaner. Should the filter become clogged up, the airflow inside the dryer will be seriously compromised: drying times lengthen and you will consume more energy. It may also damage your dryer.

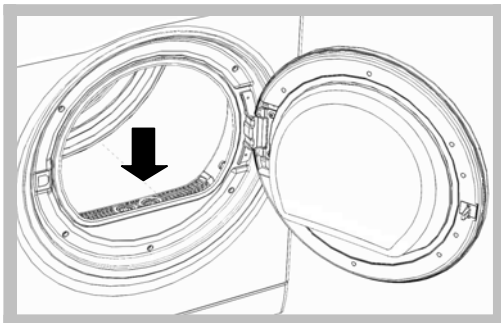


The filter is found in front of the dryer trim (see diagram).

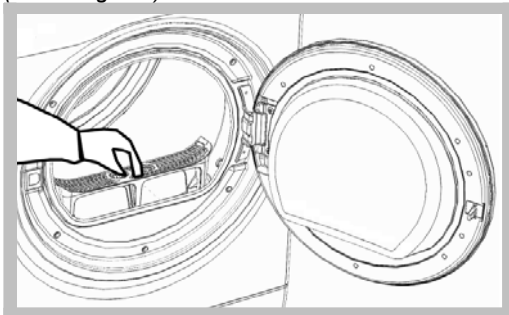

Removing the filter:

1. Pull the plastic grip of the filter upwards (see diagram).

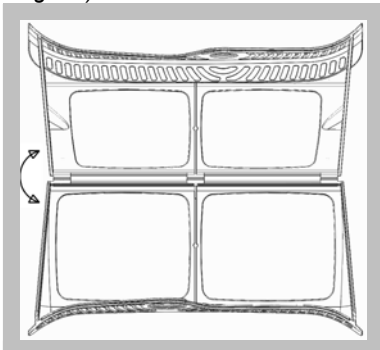

2. Open up the filter, clean the lint from the inside surface of the filter.

3. Replace the filter ensuring it is fully located flush into the tumble dryer trim.
4. Remove any lint that has built up on the inside of the door and around the door seal.

! Do not use dryer without replacing the filter.

Check the drum after each cycle

Turn the drum manually in order to remove small items (handkerchiefs) that could have been left behind.

Cleaning the drum

! Do not use abrasives, steel wool or stainless steel cleaning agents to clean the drum

A coloured film may start to appear on the stainless steel drum, this may be caused by a combination of water and, or cleaning agents such as fabric conditioner from the wash. This coloured film will not affect the dryer performance.

Cleaning the dryer

- External parts in metal or plastic and rubber parts can be cleaned with a damp cloth.
- Periodically check the vent tube and any permanent venting fixture to make sure that there has been no accumulation of fluff or lint, and remove it.
- Remove lint that collects around filter and the outlet vents.

! Do not use solvents or abrasives.

! Your dryer uses special bearing components which do not need lubrication.

! Have your dryer checked regularly by authorized technicians to ensure electrical and mechanical safety (see Service).

Troubleshooting

One day your dryer seems not to be working. Before you call your Service Centre (see *Service*), go through the following troubleshooting suggestions.

Problem:

Possible causes / Solutions:

The dryer won't start

- The plug is not plugged into the socket, or not making contact.
- There has been a power **failure**.
- The fuse has blown. Try to plug another appliance into the socket.
- You are using an extension cord. Try to plug the dryer's power cord directly into the socket.
- The door is not closed securely.
- The PROGRAMMES knob has not been set properly (see *Start and Programmes*).
- The START/PAUSE button has not been pressed (see *Start and Programmes*).

Drying cycle will not begin.

- You have set a delay time (see *Start and Programmes*).

It is taking a long time to dry.

- The filter has not been cleaned (see *Maintenance*).
- The correct program has not been selected for the type of fabric **you** are drying (see *Start and Programmes*).
- The flexible vent tube is obstructed (see *Installation*).
- The air intake vent is obstructed (see *Installation*).
- The permanent Ventilation flap on the storm cover is obstructed (see *Installation*).
- The items are too wet (see *Laundry*).
- The dryer is overloaded (see *Laundry*).

Programme finishes and clothes damper than expected

! For safety the dryer has a maximum programme time of **4** hours. If an automatic programme has not sensed the required final moisture in this time the dryer will complete the programme and stop. Check the above points and run the programme again, if the results are still to damp, contact the service centre (see *Service*).

The option lights flash and the Display shows a fault code F followed by one or two numbers

- If the display shows a fault, Turn off and remove plug, Clean the Filter (see *Maintenance*). Then replace plug turn on and start another program. If a fault is then displayed. Note down the number and contact the service centre (see *Service*)
- The dryer is in 'Demo' mode. Press and hold both the On/Off and Start/Pause buttons for 3 seconds. The display will show **dOFF** for 3 seconds and then the dryer will resume normal operation.

The display briefly shows **dOn** every 6 seconds.

Service TD4303AS70 Issue 1



Before calling the Service Centre:

- Use the troubleshooting guide to see if you can solve the problem yourself (see *Troubleshooting*).
- If not, turn off the dryer and call the Service Centre closest to you.

What to tell the Service Centre:



- Name, address, and post code;
 - telephone number;
 - the type of problem;
 - the date of purchase;
 - the appliance model (Mod.);
 - the dryer serial number (S/N);
- This information can be found on the data label inside the door of the machine.

Spare Parts

This dryer is a complex machine. Repairing it yourself or having a non-authorized person try to repair it could cause harm to one or more persons and to the machine, and could invalidate the spare parts warranty. Call an authorised technician if you experience problems while using the machine.

Comparative Programmes

- Programmes recommended for comparative test to AS/NZ 2442.2

| Programme to select | Load Size | Heat Setting | Dryness Option |
|---|-----------|--------------|--|
| Cottons  | 7 kg | High | Extra Dry.  |

! Note: For full list of programme options (see *Start and Programmes*)

ARISTON PRIORITY SERVICE

If you are not completely satisfied with your appliance or require service call:

Australia -
 Phone: 1300 815 589
 New Zealand –
 Phone: (09) 306 1020

GENUINE ACCESSORIES & SPARE PARTS

A wide range of genuine accessories are available for your appliance call:

Australia –
 Phone: 03 9768 0888
 New Zealand
 – Phone: (09) 306 1020

AUSTRALIA

ARISIT PTY LIMITED
 40-44 Mark Antony Drive, Dandenong South
 VIC 3175, Australia
 Fax: Service & Sales (03) 9768 0838
 Email: consumer.care@arisit.com

NEW ZEALAND

ARISIT PTY LIMITED
 PO Box 68-140 Newton, Auckland 1145
 New Zealand
 Fax: (09) 302 0077
 Email: sales@aristonappliances.co.nz

| | |
|---|---|
|  | This appliance conforms to the following EC Directives: |
| | - 2006/95/EC (Low Voltage Equipment); |
| | - 89/336/EEC, 92/31/EEC, 93/68/EEC (Electromagnetic Compatibility). |

