

Instruction booklet TUMBLE DRYER

Contents

Important Information 2-3

Installation, 4

- Where to put your dryer
- Ventilation
- Electrical connection
- Before you start using your dryer

Dryer Description, 5

- The Features
- Control Panel

The Display, 6

Start and Programmes, 7-11

- Choosing a Programme
- Table of Programmes
- The Controls

Laundry, 12-13

- Sorting your laundry
- Wash care labels
- Special clothing items
- Drying times

Warnings and Suggestions, 14

- General safety
- Save energy and respect the environment

Maintenance and Care, 15

- Switching off the electricity
- Clean the filter after each cycle
- Empty the Water Container after each cycle
- Check the drum after each cycle
- Cleaning the Condenser
- Cleaning the dryer

Troubleshooting, 16

Service, 17

- Spare parts
- Disposal



TCF 87B

! Keep this instruction booklet on hand in order to refer to it when necessary. Take it with you when you move, and, should you sell this appliance or pass it on to another party, make sure that this booklet is supplied along with the dryer so that the new owner may be informed about warnings and suggestions on how the dryer works.

! Read these instructions carefully; the following pages contain important information on installation and suggestions on how the appliance works.



This symbol reminds you to read this booklet.





Important Information

TD4255HL issue 1

For your Condenser dryer to operate efficiently, you must follow the regular maintenance schedule shown below:

Fluff Filter – You must Clean the fluff filter after **every** drying cycle

GB

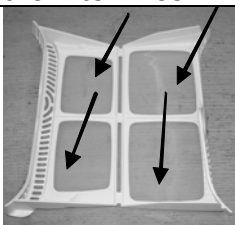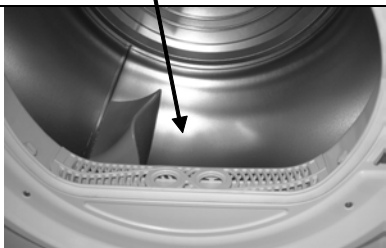Step 1 Open the door of your dryer.	Step 2 Remove the filter.	Step 3 Open filter and clean any fluff deposits from the filter mesh.	Step 4 Refit the filter – Never run the dryer without a filter.
			

TD4199HC_1.JPG




TD4199HC_2.JPG

TD4199HC_3.JPG

TD4199HC_4.JPG

Failure to clean the filter after every cycle will affect the drying performance of your machine – It will take longer to dry and as a result will use more electricity during drying

Water Container – You must empty the water container after **every** drying cycle.



Step 1 Pull the water container towards you and remove it fully from the dryer	Step 2 Remove either the small or large cap and Empty the Water from the Container	Step 3 Refit the Water Container ensuring that it is pushed fully back into position...
		

TD4199HC_5.JPG

TD4199HC_6.JPG

 
TD4255HC_1.JPG

Failure to empty the Water Container will result in:

- The machine will stop heating (so the load may be wet at the end of the cycle).
- When the Container is full, the Empty water Icon  will be on, the display will show H2O and the bottle full icon  will flash.



TD4255_2.JPG

The Empty Water Icon  is on to remind you to empty the water container at start and end of a programme

Priming the Water Collection System

When your dryer is new, the Water Container will not collect Water until the system is primed, this will take 1 or 2 drying cycles. Once primed it will collect Water during every cycle.

Important Information

TD4200HC Issue 1

Condenser Unit - You must clean the fluff from the condenser **every** month


GB

Step 1
Open the Condenser Cover
- hold the handle and pull towards you




TD4199HC_1

Step 2
Remove the condenser by rotating the 3 clips then pulling the condenser towards you. (There may be some water in the tubes this is normal)

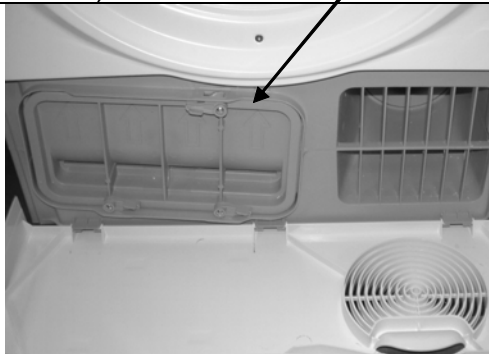

TD4200HC_2

Step 3
Flush the condenser, from the rear with water, to remove any fluff deposits.

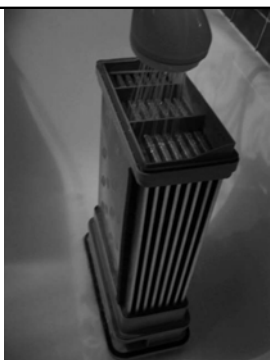


TD4108HC_3.JPG

Step 4
Refit the condenser unit - ensure that the unit is pushed in fully, all 3 clips are re-secured and the positioning arrows on the front of the condenser are pointing upwards.



TD4200HC_3

Rotate 3 Clips

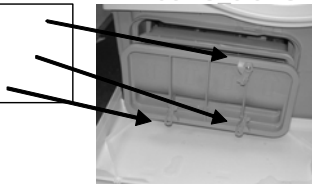

TD4200HC_4

Check That:

- The positioning arrows are pointing upwards.
- The 3 clips re secured back in their 'lock' position..

Failure to clean the condenser could cause premature failure of your dryer

Installation


TD4023FAUS Issue 1

Where to put your dryer

GB

- Place your dryer at a distance from gas ranges, stoves, heaters, or cook tops because flames can damage the appliance.

If you are going to install the appliance under a work counter, be sure to leave a 10 mm space between the top and any other objects on or above the machine and a 15 mm space between the sides and lateral furnishings or walls. This is to ensure proper air circulation.

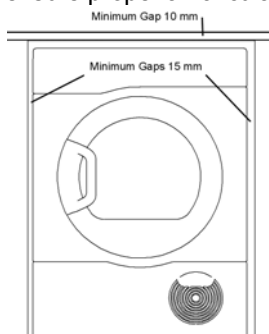

Ventilation

- When the dryer is in use, there has to be adequate ventilation. Make sure you put your dryer in an environment that is not damp and has proper air circulation throughout. Airflow around the dryer is essential to condense the water produced during the washing, the dryer will not operate efficiently in an enclosed space or cupboard.

! We do not recommend that the dryer is installed in a cupboard because dangerous levels of heat can build up. ! The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer in such a way that a full opening of the tumble dryer door is restricted

! If using the dryer in a small or cold room some condensation could be experienced

Water Drain

If your dryer is installed next to a drain the water can be plumbed into this drain. This does away with the need to empty the water container. If the dryer is stacked onto or installed next to a washing machine it can share the same drain.

The dryer is supplied with a length of hose and this must be used to drain the condensed water under certain conditions.


If you are using a washing machine with a spin speed below 1100 rpm and drying loads of 7 kg or more also for energy label tests to AUS/NZS 2442 you must plumb out the water or the container may fill before the clothes are dried. Follow the instruction below.

The height of the drain must be less than 3' (1 m) from the bottom of the dryer.


Remove existing hose from position shown in picture A And fit the supplied length of hose to location shown in picture B.

! Make sure that the hose is not squashed or kinked when the dryer is in its final location.

The length of the hose can be reduced if necessary to avoid this.

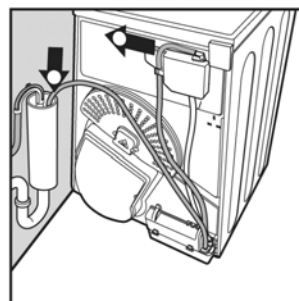

Picture A

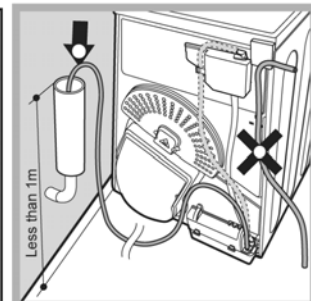

Picture B

Electrical connection

Make sure of the following before you insert the plug into the electrical socket:

- The socket must be grounded.
- The socket must be able to sustain the machine's maximum power, which is indicated on the rating label (*see Dryer Description*).
- Power voltage must be within the values indicated on the rating label (*see Dryer Description*).
- The socket must be compatible with the dryer's plug. Should this not be the case, replace the plug or the socket.

! The dryer must not be installed outdoors, even if the space is sheltered. It can be very dangerous if exposed to rain or storms.

! Once installed, the dryer's electrical wire and plug must be within reach.

! Do not use extension cords

! The power cord must not be bent or squashed.

! The power cord should be checked periodically and replaced by a cord specially prepared for this dryer and fitted only by authorised technicians. (*see Service*). New or longer power cords are supplied at an extra charge by authorised dealers.

! Ensure that any portable outlet or extension lead is positioned so that it is not subjected to any splashing or ingress of moistures

! The manufacturer denies any responsibility should any of these rules not be followed.

! If in doubt about any of the above consult a qualified electrician

Before you start using your dryer


Once you've installed your dryer and before you use it, clean the inside of the drum to remove any dust that could have accumulated during transportation.

Dryer Description


TD4247FUT Issue 2


The Features

GB

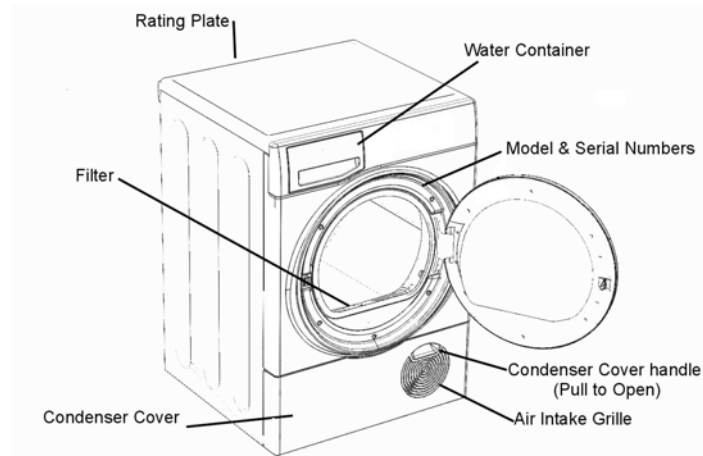


Control Panel

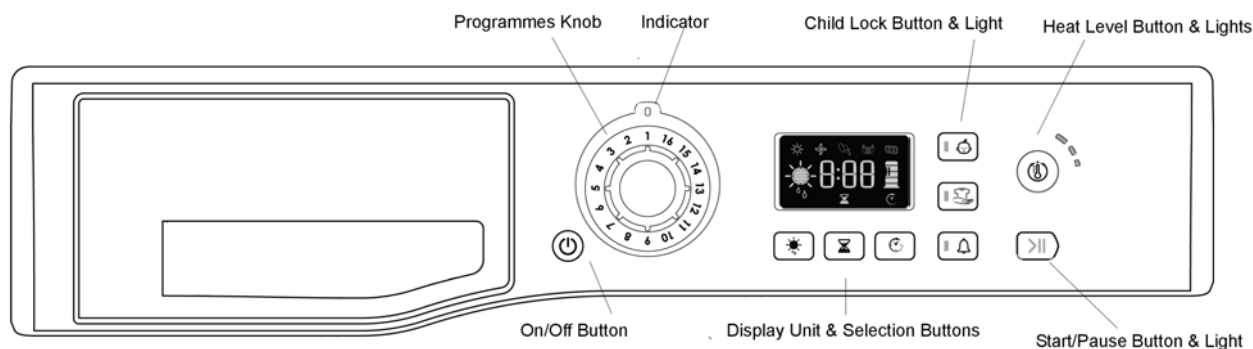

The **ON/OFF** button , if the dryer is running and this button is pressed and held for more than 3 seconds the dryer is turned off, **its counts down 3, 2, 1 Off, the programme is then cancelled.** Press **and hold for more than 3 seconds** and the dryer **reactivates**.


The **PROGRAMMES** knob sets the programme: rotate until the indicator is pointing to the programme you want to select (see Start and Programmes).



The **OPTION** buttons/ lights select available options for your selected programme. The lights indicate that the option has been selected. (see Start and Programmes).


The **START/PAUSE** button/light  starts a selected programme. When you press this button there will be one beep and the progress lights will flash to confirm the action. When a programme is running holding this button in pauses the programme and stops the dryer. The light is green when a programme is running, flashing amber if the programme has been paused and flashing green if on standby waiting to start a Programme. (see Start and Programmes).

The **Display Unit** gives an indication of the drying or delay time together with icons that light to give warning information and the status of your programmes progress. The three

buttons below the display select Automatic or timed dry and if required a delayed start. (see Start and Programmes or The Display)

The **Child Lock** button/ light.  Press and hold his button after selecting your programme and any options the light turns on and this prevent the programme settings from being changed. When the light is lit, the other buttons are disabled. Hold the button to cancel and the light will go out

The **Empty Water** Icon  signals that the water container should be emptied. The display will take a few seconds to update after replacing the empty water container; the dryer must be running for this to happen. (see The Controls)
Note: if the water bottle fills the water bottle full icon  also flashes, the display shows **HPI**, the heat is turned off and your clothes will not dry


The **Clean Filter** Icon  gives a reminder before every programme, that its essential to clean the filter very time the dryer is used (see Maintenance and Care).

The **Clean Condenser** Icon  gives a reminder, that its essential to clean the condenser at regular intervals. see Maintenance and Care).

The Display

TD4252FUH Issue 1

The Display has three main functions each with its corresponding button

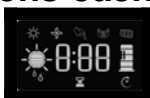

Dryness Sensing Levels

After selecting a programme that has a Sensing Dry Option, press and release the button until the required dryness sensing level is displayed. If the sensing option is not available the display will flash and the buzzer beeps three times.

! Some sensing programmes do not have all seven dryness level options

Dryness levels available



Damp Dry: Dries your items ready to be ironed using a machine or rotary ironer.



Iron Dry: Dries your items ready to be ironed using a hand iron.



Hanger Plus Dry: Dries you delicate items ready to be hanged for final drying.



Hanger Dry: Dries your items ready to be hanged for final drying.



Light Dry: Dries your delicate clothes ready to be put away.



Cupboard Dry: Dries your items ready to be put away.



Extra Dry: Dries your clothes ready to be worn.

Timed Dry



After selecting a Programme that has a Timed Dry Option, press the Timed Button and the Timed Dry Icon will light, the display will reduce the selected time each time you press and release this button (see *Start and Programmes*). Each programme that has a timed option has different times available and the selection of **up to 11** drying times will also depend on the heat setting that you have selected


Each press of the button decreases the drying time.

If you change your mind, press the sensing button and sensing level options are available.


If the Timer Dry option is not available the display will flash and the buzzer beeps three times.

The selected time remains displayed after the programme starts and can be changed during the programme if you wish.


Delay Timer

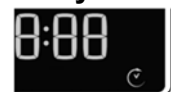


After selecting a Programme that has a Delay Timer Option a delay start time can be selected.

Each press of the Delay button  advances the delay setting in 30 minutes increments from **0:30** to **9:30** and then increments from **10:00** to **24:00** then **OFF** and then after five seconds cancels the delay.


For delays of 10 hours or more the display counts down the time in hours until 10 hours, then the display shows **9:59** and then counts down in minutes. For delays 9 hours or less the display shows hours and minutes and then count down in minutes for all of the delay.

After the Start/Pause Button  is pressed the delay time can be changed or cancelled.

When the delay period finished the  symbol is off and the **Time to End** is displayed.

Note: During this period the clothes will tumble occasionally to help prevent creases developing.

Time to End

If the delay icon  is off the time displayed is the **Time to End** of the programme running.

When timed programmes are selected the time displayed throughout the cycle is the actual time remaining.

When an Automatic programme is selected the time displayed is an estimate of the time remaining. When the programme is selected the display shows the time required to dry a full load, after around 10 minutes the controller calculates a better estimate of the cycle time **and this is updated during the programme.**

The time to end is displayed in hours and minutes and counts down each minute.

The colons between the hours and minutes display flashes to show that the time is counting down.


The Display also shows if there is a problem with your dryer, if this occurs the display will show F followed by a fault code number, the three option lights and the pause light will also flash Orange. (see *Troubleshooting*).


Start and Programmes

TD4248FUH Issue 2

Choosing a Programme

GB

1. Plug the dryer into the electrical socket.
2. Sort your laundry according to fabric type (see *Laundry*).
3. Open the door and make sure the filter is clean and in place and the water container is empty and in place (see *Maintenance*).
4. Load the machine and make sure that the items are not in the way of the door seal. Close the door.
5. If none of the lights are On, press the On/Off Button .
6. Choose a programme by checking the Programmes guide (see *Programmes*) as well as the indications for each type of fabric (see *Laundry*).; - select a programme by rotating the PROGRAMME knob.
7. Choose Timed Dry or Dryness Level option.
If Timed Drying press and release Timed button until time required is displayed. Or
To change from default dryness setting press and release Dryness Levels button until required level is indicated (see *The Display*)
! See *programmes tables*, for details of availability of Dryness levels, Timed dry and Options



 
 

 
 




 

 





8. Set a delay time and other options if necessary.
 9. The START/PAUSE light is flashing green, press the START/PAUSE  button to begin. The green light stops flashing.
During the drying programme, you can check on your laundry and take out the items that are dry while the others continue drying. When you close the door again, press START/PAUSE button in order to resume drying
(When the door is open the START/PAUSE light will flash Amber and after door is closed and START/PAUSE button pressed will stop flashing and show green).
 10. To let you know that your programme is complete the buzzer will beep 3 times. (Note: If the SOUND option was selected the buzzer beeps 3 times every 30 seconds for 5 minutes)...
- Open the door, take your laundry out, clean the filter and replace it. Empty the water container and replace it (see *Maintenance*).

11. Unplug the dryer.

Note.

This tumble dryer, in compliance with new energy saving regulations, is fitted with an automatic standby system which is enabled after about 30 minutes if no activity is detected. Press and hold the **ON-OFF** button until the dryer reactivates.

Essential Programmes - Programmes Table

Programme	Options Available						Dryness Levels Available (default highlighted)						
													
	Delay Timer	Extra Care	Sound	Heat Level	Timed Dry	Sensor Dry	Damp Dry	Iron Dry	Hanger Dry Plus	Hanger Dry	Light Dry	Cupboard Dry	Extra Dry
1 Cottons 	✓	✓	✓	High	✓	✓	✓	✓	✓	✓	✓	✓	✓
				Medium	✓	✓	✓	✓	✓	✓	✓	✓	✓
				Low	✓	✓	✓	✓	✓	✓	✓	✓	✓
2 Shirts 	✓	x	✓	High,	✓	✓	✓	✓	✓	✓	✓	✓	✓
				Medium	✓	✓	✓	✓	✓	✓	✓	✓	✓
3 Bed & Bath 	✓	✓	✓	High,	x	✓	✓	✓	✓	✓	✓	✓	✓
				Medium	x	✓	✓	✓	✓	✓	✓	✓	✓
4 Anti Allergy 	✓	x	✓	x	An Automatic programme								
5 Synthetics 	✓	x	✓	Medium Low	✓	✓	✓	✓	✓	✓	✓	✓	x
6 Quick Dry 	✓	x	✓	High Medium	An Automatic programme								

Cottons

- This is a programme for Cotton Items.
- The duration of this programme will take will depend on the size of the load, the dryness setting selected and the spin speed used in your washer.(see *The Laundry*)

Start and Programmes

TD4249FUH Issue 4

Essential Programmes



Shirts

High heat option

- This is a programme for Shirts made from Cotton.
- It can be used for load sizes up to 3 kg (approximately 10 shirts).

Medium heat option

- This is a programme for Shirts made from synthetic materials or a mixture of natural and synthetics materials such as Polyester and Cotton.
- It can be used for load sizes up to 3 kg (approximately 14 shirts).

The duration of this programme will depend on the size of the load the dryness setting selected and the spin speed used in your washer

Loads dried using the Cupboard Dry setting are usually ready to wear; the edges or seams may be slightly damp. If this is found try turning the shirts inside out and running the programme again for a short period



Bed & Bath

- This is a programme for Cotton Towels and sheets
- The duration of this programme will depend on the size of the load, the dryness setting selected and the spin speed used in your washer. (see *The Laundry*)
- Loads dried using the Extra Dry setting are usually ready to use; the edges or seams may be slightly damp especially on large items. If this is found try opening them out and running the programme again for a short period.



Anti Allergy Programme

This programme has the "Seal of Approval" endorsement from Allergy UK, which reflects the effective reduction and elimination of allergens from the clothes with the special Anti Allergy Cycle. With this programme, thanks to the achievement of constant temperature for an extended period of time, the effects of the most common allergens (including House Mites and Pollen) are neutralized. Can be used on a full size wet load to dry and treat or on a 4kg dry load to just treat your articles.



Synthetics

- This is a programme for items of Synthetic or Synthetic / Cotton mixtures.
- The duration of this programme will depend on the size of the load, the dryness setting selected and the spin speed used in your washer. (see *The Laundry*)



Quick Dry

This programme is for small loads up to 1 kg, **Note:** can only be used with the Cupboard Dry setting. Your drying time is very much reduced with a huge time saving up to 53% on cottons (with High Heat option) and 50% on synthetics (with Medium Heat option).

Exclusive Programmes - Programmes Table

Programme	Options Available						Dryness Levels Available (default highlighted)							
	Delay Timer	Extra Care	Sound	Heat Level	Timed Dry	Sensor Dry	Damp Dry	Iron Dry	Hanger Dry Plus	Hanger Dry	Light Dry	Cupboard Dry	Extra Dry	
7 Jeans	✓	x	✓	x	x	✓	✓	✓	✓	✓	✓	✓	✓	
8 Wool	x	x	✓	x	An Automatic programme									
9 Silk	x	x	✓	x	x	✓	✓	✓	✓	✓	✓	✓	x	
10 Delicates	✓	x	✓	x	✓	✓	✓	✓	✓	✓	✓	✓	x	
11 Duvet	✓	x	✓	High Medium	An Automatic programme									
12 Baby Cycle	✓	x	✓	x	✓	✓	✓	✓	✓	✓	✓	✓	x	

Start and Programmes

TD4253FUH Issue 1


Exclusive Programmes

Jeans

- This is a programme for Jeans made from Denim Cotton. Before drying your Jeans turn the front pockets inside out.
- It can be used for load sizes up to 3 kg (approximately 4 pairs).
- Do not mix dark and light coloured items.
- It can also be used on other garments made from same material such as jackets.
- The duration of this programme will depend on the size of the load and the spin speed used in your washer.
- Loads dried using this programme are usually ready to wear; the edges or seams may be slightly damp. If this is found try turning the jeans inside out and running the programme again for a short period.

! We do not recommend that you use this programme if your jeans have elastic waste bands, studs or embroidery.

Wool Programme

- This is a programme for tumble dryer safe garments marked with the symbol .
- It can be used for load sizes up to 1 kg (approximately 3 sweaters).
- We recommend that garments are turned inside out before drying.
- The duration of this programme will depend on the size of the load and the spin speed used in your washer.
- Loads dried using this programme are usually ready to wear, but on some heavier garments the edges may be slightly damp. Allow these to dry naturally as over-drying could damage garments.

! Unlike other materials, the mechanism of wool shrinkage is irreversible; i.e. it will not stretch back to original size and shape.

! This program is not suitable for Acrylic garments

Silk

- This is a programme for drying your Delicate Silk.
- It can be used for load sizes up to 0.5 kg.
- The duration of this programme will depend on the size of the load and the spin speed used in your washer.
- Loads dried using this programme are usually ready to use, but on some heavier garments the edges may be slightly damp. If this is found try removing the load and open them out then run the programme again for a short period.

Delicates

- This is a programme for drying your Delicate Clothes i.e. Acrylics.
- It can be used for load sizes up to 2.0 kg.
- The duration of this programme will depend on the size of the load and the spin speed used in your washer..
- Loads dried using this programme are usually ready to use, but on some garments may be slightly damp. If this is found try removing the load and open them out or turn inside out then run the programme again for a short period.

Duvet

! Take care with these programme do not dry any items that are damaged which could result in the filling blocking the filter and air path resulting in a fire hazard.

- Must only be used on Single size duvets not suitable for double or king size items.
- Loads dried using this programme are usually ready to use, but may be slightly damp in places. If this is found try removing the load and open them out and shake then run the programme again for a short period.
- Also suitable for down filled jackets.
- Select high heat for Cotton Duvets and **medium** heat for Synthetic Duvets
- The programme time will depend on size and density of the load and the spin speed used in your washer














 



Baby Cycle

- This is a programme for drying your baby's small delicate items of clothing and bedding (Cotton and Chenille) and for drying your Delicate Clothes.
- Do not dry items such as bibs and nappy pants with plastic coverings.
- It can be used for load sizes up to 2 kg.
- The duration of this programme will depend on the size of the load and the spin speed used in your washer.
- Loads dried using this programme are usually ready to use, but on some heavier garments the edges may be slightly damp. If this is found try turning them inside out and running the programme again for a short period.

Start and Programmes

TD4250FUH Issue 3

 Extra Programmes – Programmes Table

Programme	Options Available						Dryness Levels Available (default highlighted)						
													
	Delay Timer	Extra Care	Sound	Heat Level	Timed Dry	Sensor Dry	Damp Dry	Iron Dry	Hanger Dry Plus	Hanger Dry	Light Dry	Cupboard Dry	Extra Dry
13 Cuddly Toys 	✓	x	✓	An Automatic programme									
14 Heat & Enjoy 	x	x	x	An Automatic programme									
15 Easy Iron 	x	x	✓	An Automatic programme									
16 Refresh 	x	x	✓	An Automatic programme									

Cuddly Toy Programme



With the cuddly toy programme you can remove dust easier and wash the cuddly toys more often because the drying time is very much reduced compared to drying in the open air. It's a delicate drying cycle that dries at low temperature and with soft mechanical action to maintain at best the original look and the shine of the fur.

Note: For allergy protection, just freeze for 24hrs your cuddly toys, wash and dry. Repeat every 6 weeks. Before drying remove accessories such as clothes, collars or sound boxes and protect plastic eyes with masking tape, after drying them with a cloth.

The programme will take about 200 minutes; Load size, 2-3 Cuddly Toys.

Heat & Enjoy

This programme helps to heat towels & bathrobes for a warm sensation after a bath or shower. It is also useful for warming clothes before dressing during winter. The cycle heats clothes to 37°C (Body Temperature) and runs at this temperature for a maximum of 4 hours or until you stop the cycle by opening the door. Maximum load 3 kg.

During this programme a  icon rotates in the display until the temperature target is reached at which point the dryness level icon  flashes.

Easy Iron Programme

Easy Iron is a short 10 minute programme (8 minutes of heat followed by a 2 minute cool tumble period) which fluffs the fibres of clothing that has been left in the same position/location for an extended period of time. The cycle relaxes the fibres and makes them easier to iron and fold. ! Easy Iron is not a drying programme and should not be used for wet articles of clothing.

For best results:

- Do not load more than maximum capacity.
These numbers refer to dry weight
Fabric: Max load:
Cotton and Cotton mix 2.5 kg
Synthetics 2 kg
Denim 2 kg`
- Unload the dryer immediately after the end of the drying cycle, hang, fold or iron the articles and put them away in the closet. Should this not be possible, repeat the programme

The Easy Iron effect varies from one fabric to the next. It works very well on traditional fabrics like Cotton or Cotton mix, and less well on acrylic fibres and on materials such as Tencel.®

Refresh

! Airing is not a drying programme and should not be used for wet articles of clothing.

- It can be used on any load size, but is more effective on smaller loads.
- Do not overload your dryer (see *Laundry*)

20-minute programme that airs: your clothes with cool air. Use also to cool warm clothes


Start and Programmes

 
TD4254FUH Issue 2

The Controls

• Programmes knob

! Warning, if after pressing the start button the programme knob position is changed, the new position will **NOT** change the programme selected. To change programme press

Start/Pause Button  to pause the programme, the light flashes Amber to indicate the programme is paused. Select the new programme and any options required, the light will then flash green.

Press the Start/Pause Button  and the new programme will start.

• Option Buttons/ Lights

These buttons are used to customise the selected programme to your requirements. A programme must have been selected on the Programmes knob before an option can be selected. Not all options are available for all programmes (see *Start and Programmes*). If an option is not available and you press the button, the buzzer will beep three times. If the option is available the light in the button is lit to confirm your selection. After the start switch has been pressed were available only the Sound option can be changed.

• Progress (Drying, Cool tumble), Icons

These are part of the Display unit they indicate the progress of the dryer each one comes on as the corresponding phase starts.

• Time Delay

The start of some programmes (see *Start and Programmes and The Display*) can be delayed for up to 24 hours. Ensure the water bottle is emptied before setting a delayed start.

During this period the clothes are occasionally tumbled to help prevent creases developing.

• Extra Care

This Anti-ageing function for Cottons **and Synthetics** helps to maintain the brightness of your laundry for long time thanks to the use of the right drum rotation (reduced in the last part of cycle) and the correct drying temperature.

Note: It cannot be used with the "Extra Dry", "Cupboard Dry" and "Light Dry" dryness levels

Sound

If selected gives a signal at the end of the drying cycle to remind you that the clothes are ready to be removed. Not Available on Heat & Enjoy programme.


• Heat Level Button and Lights

Not all programmes allow you to change the heat level, and some of these programmes do allow all three heat level options. When the option change the heat level is available pressing this button changes the heat level selected and the corresponding light is lit for the three available levels, Low, Medium and High.

DISPLAY


The display shows either the amount of time delay remaining or an indication of the amount of time left for a drying programme. (see *The Display*) The Colons between the hours and minutes display flash to show that the time is counting down.

When the programme finishes its cool tumble phase the


display will show .



• Empty Water Icon / Container

(If you have plumbed your dryer to a drain this light can be ignored, as there is no need to empty the water container.)

When this icon  is on its reminds you to empty the water container.

If the water container fills during a programme, the heater turns off and the dryer does a period of Cool Tumble then the


buzzer sounds, the bottle full icon  flashes, the display

shows  and the Empty water icon  is displayed


You must empty the container and restart the dryer or the clothes will not dry. After re-starting the dryer the display will take a few seconds to go refresh.

To avoid this always empty the water container each time you use the dryer (see *Maintenance*)

• Door Opening

Opening the door (or pressing the Start/Pause Button ) during a programme will stop the dryer and have the following effects..

- The Start/Pause Light flashes Amber.
- During a delay phase the delay will continue to count down. The start button **must** be pressed to resume the delay programme.
- The start button **must** be pressed to resume the programme. The progress lights will change to show the current status and the Start/Pause light will stop flashing and turn green.
- Changing the Programmes knob will select a new programme and the Start/Pause Light will flash green. You can use this to select the Refresh

programme  to cool the clothes if you find them dry enough.

Press the start button to begin a new Programme.

• Note

If you have a power cut, switch off the power or remove the plug, press and hold the **On/Off** button until the dryer reactivates, then press the Start/Pause Button.

Laundry

TD4003NC8 Issue 1

Sorting your laundry

- Check symbols on clothing labels to make sure that the articles can be tumble dried
- Sort laundry by fabric type.
- Empty pockets and check buttons.
- Close zippers and hooks and tie loose belts and strings
- Wring out each item in order to eliminate as much excess water as possible.

! Do not load dripping wet clothes into the dryer

Maximum load

Do not load more than maximum capacity.

These numbers refer to dry weight:

Natural fibres: 8 kg max (18 lb)

Synthetic fibres: 3 kg max (6.6 lb)

! Do not overload the dryer as this could result in reduced drying performance.

Typical weights

Note: 1kg = 1000g; (1 lb = 16 oz.)


Clothes		
Blouse	Cotton	150g (5 oz)
	Other	100g (3 oz)
Dress	Cotton	500g (1lb 2 oz)
	Other	350g (12 oz)
Jeans		700 g (1 lb 6 oz)
10 Nappies		1000 g (2 lb 6 oz)
Shirt	Cotton	300g (10 oz)
	Other	200g (7 oz)
T - Shirt		125 g (4 oz)


Household items		
Duvet cover (Double)	Cotton	1500g (3 lb 5 oz)
	Other	1000g (2 lb 3 oz)
Large Tablecloth		700 g (1 lb 6 oz)
Small Tablecloth		250 g (9 oz)
Tea Towel		100 g (3 oz)
Bath Towel		700 g (1 lb 6 oz)
Hand Towel		350 g (12 oz)
Double Sheet		500 g (1 lb 2 oz)
Single Sheet		350 g (12 oz)


At the end of a drying cycle, cottons could still be damp if you grouped cottons and synthetics together. If this happens simply give them an additional short period of drying.


Wash care labels

Look at the labels on your garments, especially when tumble drying for the first time. The following symbols are the most common:


 May be tumble dried.

 Do **not** tumble dry.

 Tumble dry at high heat setting.

 Tumble dry at low heat setting.

What not to tumble dry in your dryer:

- Articles that contain rubber or rubber-like materials, or plastic film (pillows, cushions, or PVC rainwear); any other flammable objects, or objects that contain flammable substances (towels soiled with hairspray).
- Glass fibres (certain types of draperies).
- Items that have been Dry Cleaned.
- Items with the ITLC code ("*Special clothing items*") . These can be cleaned with special at-home dry cleaning products. Follow instructions carefully.
- Large bulky items (quilts, sleeping bags, pillows, cushions, large bedspreads, etc.). These expand when drying and would prevent airflow through the dryer.

GB**Special clothing items** TD4026EC8 issue 1

Blankets and bedspreads: acrylic items (Acilan, Courtelle, Orion, Dralon) must be dried with special care on a low heat setting. Avoid drying for a long period of time.

Pleated or creased garments: read manufacturer drying instructions on the garment.

Starched articles: do not dry these items with non-starched items. Make sure that as much of the starch solution is removed from the load as possible before placing it in the dryer. Do not over-dry: the starch will become powdery and leave your clothing limp, which defeats the purpose of starch.

Drying times

The table below presents APPROXIMATE drying times in minutes. Weights refer to dry garments:

Times are approximate and can vary depending upon:

- Amount of water retained in clothes after spin cycle: towels and delicates retain a lot of water.

- Fabrics: items that have the same type of fabric but different textures and thicknesses may not have the same drying times.
- Quantity of laundry: single items or small loads may take longer to dry.
- Dryness: if you are going to iron some of your clothes, they can be taken out while still a bit damp. Others can be left longer if you need them to be completely dry.
- Heat setting.
- Room temperature: if the room where the dryer is located is cold, it will take longer for the dryer to dry your clothes.
- Bulk: some bulky items can be tumble dried with care. We suggest that you remove these items several times, shake them out, and return them to the dryer until finished.

! Do not over-dry your clothes.

All fabrics contain a little natural moisture, which keeps them soft and fluffy.

Cottons	Drying times 800-1000 rpm in washing machine							
High / Full Heat	1 kg	2 kg	3 kg	4 kg	5 kg	6 kg	7 kg	8 kg
	30 - 40	40 - 55	55-70	70-80	80-90	95-120	120 - 140	130 - 150
Synthetics	Drying times on reduced spin in washing machine							
Gentle / Low Heat	1 kg		2 kg			3 kg		
	40-50		50-70			70-90		
Acrylics	Drying times on reduced spin in washing machine							
Gentle / Low) Heat	1 kg				2 kg			
(Use Timed dry Programmes)	30				60			

Warnings and Suggestions TD4197 Issue 2

! This appliance has been designed and built according to international safety standards. These warnings are given for safety reasons and must be followed carefully.

General safety

- This tumble dryer is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This tumble dryer has been designed for home, and not professional, use.
- Do not touch the appliance while barefoot or with wet hands or feet.
- Unplug the machine by pulling on the plug, not the cord.
- Children must not be in proximity of the dryer when in use. After using the dryer, turn it off and unplug it. Keep the door closed to make sure that children do not use it as a toy.
- Children should be supervised to ensure that they do not play with the dryer.
- The appliance must be installed correctly and have proper ventilation. The air intake at the front of the dryer should never be obstructed. (see *Installation*).
- Never use the dryer on carpeting where the pile height would prevent air from entering the dryer from the base.
- Check to see if the dryer is empty before loading it.



The back of the dryer could become very hot. Never touch it while in use.

- Do not use the dryer unless the filter, Water Container and Condenser are securely in place (see *Maintenance*).
- Do not overload the dryer (see *Laundry* for maximum loads).
- Do not load items that are dripping wet.
- Carefully check all instructions on clothing labels (see *Laundry*).
- Do not tumble dry large, very bulky items.
- Do not tumble dry acrylic fibres at high temperatures.
- Complete each programme with its cool tumble phase.
- Do not turn off the dryer when there are still warm items inside.
- Clean the filter after each use (see *Maintenance*).
- Empty the Water Container after each use (see *Maintenance*).
- Clean the Condenser unit at regular intervals (see *Maintenance*).
- Do not allow lint to collect around the dryer.
- Never climb on top of the dryer. It could result in damage.
- Always follow electrical standards and requirements. (see *Installation*).
- Always buy original spare parts and accessories (see *Service*).

To minimize the risk of fire in your tumble dryer, the following should be observed

- Tumble dry items only if they have been washed with detergent and water, rinsed, and been through the spin cycle. It is a fire hazard to dry items that HAVE NOT been washed with water.
- Do not dry garments that have been treated with chemical products

- Do not tumble dry items that have been spotted or soaked with vegetable or cooking oil this constitute a fire hazard.
Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as a tumble dryer. The items become warm, causing an oxidation reaction with the oil. Oxidation creates heat. If the heat cannot escape, then items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.

If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed with extra detergent – this will reduce, but not eliminate, the hazard. The cool tumble phase should be **used to reduce** the temperature of the items. They should not be removed from the dryer or piled or stacked while hot

- Do not tumble dry items that have previously been cleaned in or washed in, soaked in or soiled with petrol/gasoline, dry-cleaning solvents or other flammable or explosive substances. Highly flammable substances commonly used in domestic environments included cooking oil, acetone, denatured alcohol, kerosene, spot removers, turpentine, waxes and wax removers. Ensure these items have been washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Do not tumble dry items containing foam rubber (also known as latex foam) or similarly textured rubber like materials. Foam rubber materials can, when heated produce fire by spontaneous combustion.
- Fabric softeners or similar products should not be used in a tumble dryer to eliminate the effects of static electricity unless the practice is specifically recommended by the manufacturer of the fabric softener or product.
- Do not tumble dry undergarments that contain metal reinforcements e.g. bras with metal reinforcing wires. Damage to the tumble dryer can result if the metal reinforcements come loose during drying.
- Do not tumble dry rubber, plastic articles such as shower caps or babies' waterproof covers, polythene, or paper
- Do not tumble dry rubber-backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber-coated tennis shoes.
- Remove all objects from pockets, especially lighters (risk of explosion)

! WARNING: Never stop the dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Save energy and respect the environment

- Wring out all items to eliminate excess water before tumble drying (if you use a washing machine first, select a high spin cycle). Doing this will save time and energy during drying.
- Always dry full loads - you save energy: single items or small loads take longer to dry
- Clean the filter after each use to contain energy consumption costs (see *Maintenance*).

Maintenance and Care

TD4207FUL Issue 3

GB


Switching off the electricity

! Unplug the dryer when not using it, when cleaning it, and during maintenance activities.

Clean the filter after each cycle

The filter is an important part of your dryer: it accumulates lint and fluff that is formed while drying. When finished drying, clean the filter by rinsing it under running water or with your vacuum cleaner. Should the filter become clogged up, the airflow inside the dryer will be seriously compromised: drying times lengthen and you will consume more energy. It may also damage your dryer.

The filter is found in front of the dryer trim (see diagram).

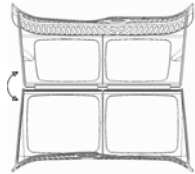

1. Pull the plastic grip of the filter upwards (see diagram).
2. Open the filter and clean the lint from the inside
3. Replace it correctly.

Ensure the filter is fully located flush into the tumble dryer trim.

4. Remove any lint that has built up on the inside of the door and around the door seal.

! Do not use dryer without replacing the filter.

Check the drum after each cycle

Turn the drum manually in order to remove small items (handkerchiefs) that could have been left behind.

Cleaning the drum

! Do not use abrasives, steel wool or stainless steel cleaning agents to clean the drum

A coloured film may start to appear on the stainless steel drum, this may be caused by a combination of water and, or cleaning agents such as fabric conditioner from the wash. This coloured film will not affect the dryer performance.

Empty the Water Container after each cycle

Pull the container out of the dryer remove either the small or large cap and empty it into a sink or other suitable drain. Refit the cap to the bottle and replace the container securely.

Always check and empty the container before you start a new drying programme.

Cleaning the Condenser Unit

- Periodically (every month) remove Condenser unit and clean any build up of fluff from between the plates by rinsing it under the tap with cold water. This should be done with cold water from the rear of the condenser.

To remove condenser

1. Unplug the dryer and open the door.
2. Pull open the condenser cover (see diagram), release the three catches by turning 90° counter clockwise then pull on the grip and remove from dryer.
3. Clean the surface of the seals and replace with the arrows pointing upwards making sure that the catches have been secured.


Cleaning the dryer

- External parts in metal or plastic and rubber parts can be cleaned with a damp cloth.
- Periodically (every 6 months) vacuum the front Air intake grille, to remove any build up of fluff, lint or dust. Also to remove accumulation of fluff from the front of condenser and filter areas, clean occasionally with a vacuum cleaner

! Do not use solvents or abrasives.

! Your dryer uses special bearing components which do not need lubrication.

! Have your dryer checked regularly by authorized technicians to ensure electrical and mechanical safety (see Service).

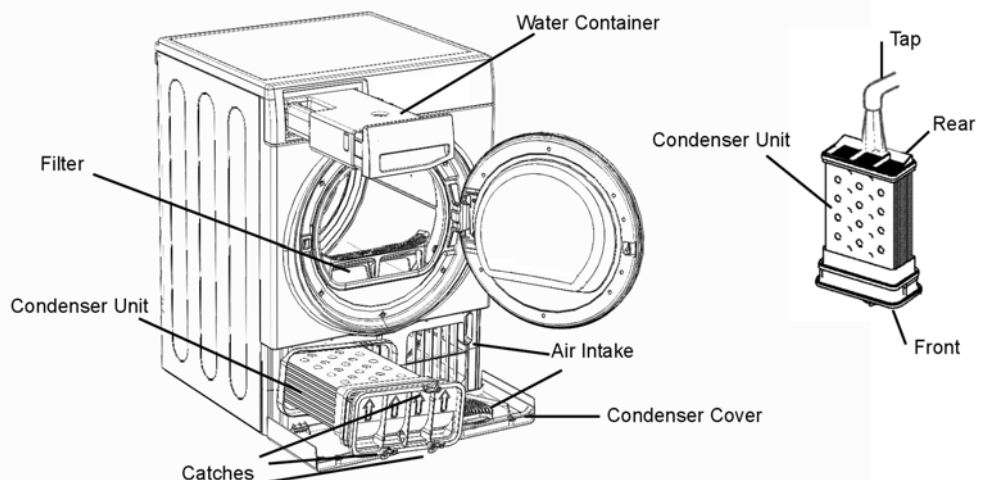

Troubleshooting

One day your dryer seems not to be working. Before you call your Service Centre (see *Service*), go through the following troubleshooting suggestions.

Problem:

Possible causes / Solutions:


 

The dryer won't start

- The plug is not plugged into the socket, or not making contact.
- There has been a power failure.
- The fuse has blown. Try to plug another appliance into the socket.
- You are using an extension cord. Try to plug the dryer's power cord directly into the socket.
- The door is not closed securely.
- The PROGRAMMES knob has not been set properly (see *Start and Programmes*).
- The START button has not been pressed (see *Start and Programmes*).

Drying cycle will not begin.

- You have set a delay time (see *Start and Programmes*).

It is taking a long time to dry

- The filter has not been cleaned (see *Maintenance*).
 - The water container needs emptying... The 'water Container full icon'  is flashing, The display shows  and the empty water icon  is on. (see *Maintenance*).
 - The condenser needs cleaning (see *Maintenance*).
 - The temperature setting is not ideal for the type of fabric you are drying (see *Start and Programmes*, and *Laundry*).
 - The correct drying time has not been selected for this load (see *Laundry*).
 - The air intake grille is obstructed (see *Installation* and see *Maintenance*).
 - The items are too wet (see *Laundry*).
- The dryer is overloaded (see *Laundry*).

The water full icon  is flashing and  displayed but the dryer has only been running for a short period.

Empty water icon  is on and the water container is not full.

- This is normal if the light is on its just a reminder to empty the container. (see *Start and Programmes*)

The Display shows a fault code F followed by one or two numbers

- If the display shows a fault, Turn off and remove plug, Clean the Filter and Condensing Unit (see *Maintenance*). Then replace plug turn on and start another program. If a fault is then displayed. Note down the number and contact the service centre (see *Service*)

Programme finishes and clothes damper than expected

! For safety the dryer has a maximum programme time of 4 hours. If an automatic programme has not sensed the required final moisture in this time the dryer will complete the programme and stop. Check the above points and run the programme again, if the results are still to damp, contact the service centre (see *Service*).

Service

TD4303AS80 Issue 1

GB

Before calling the Service Centre:

- Use the troubleshooting guide to see if you can solve the problem yourself (*see Troubleshooting*).
- If not, turn off the dryer and call the Service Centre closest to you.

What to tell the Service Centre:

- Name, address, and post code;
- telephone number;
- the type of problem;
- the date of purchase;
- the appliance model (Mod.);
- the dryer serial number (S/N);

This information can be found on the data label inside the door of the machine.



Spare Parts

This dryer is a complex machine. Repairing it yourself or having a non-authorized person try to repair it could cause harm to one or more persons and to the machine, and could invalidate the spare parts warranty.

Call an authorised technician if you experience problems while using the machine.

Comparative Programmes

- Programmes recommended for comparative test to AS/NZ 2442.2
- The dryer must be plumbed into a drain for this programme (*see Installation*)

Programme to select	Load Size	Heat Setting	Dryness Option
Cottons 	8 kg	High	Extra Dry. 

! Note: For full list of programme options (*see Start and Programmes*)

ARISTON PRIORITY SERVICE

If you are not completely satisfied with your appliance or require service call:

Australia -

Phone: 1300 815 589

New Zealand -

Phone: (09) 306 1020

GENUINE ACCESSORIES & SPARE PARTS

A wide range of genuine accessories are available for your appliance call:

Australia -

Phone: 03 9768 0888

New Zealand

- Phone: (09) 306 1020

AUSTRALIA

ARISIT PTY LIMITED

40-44 Mark Antony Drive, Dandenong South
VIC 3175, Australia

Fax: Service & Sales (03) 9768 0838

Email: consumer.care@arisit.com

NEW ZEALAND

ARISIT PTY LIMITED

PO Box 68-140 Newton, Auckland 1145

New Zealand

Fax: (09) 302 0077

Email: sales@aristonappliances.co.nz



This appliance conforms to the following EC Directives:

- 2006/95/EC (Low Voltage Equipment);
- 89/336/EEC, 92/31/EEC, 93/68/EEC (Electromagnetic Compatibility).