- Hotpoint
- Hotpoint
 ARISTON

Indesit Company S.p.A. Viale Aristide Merloni, 47 60044 Fabriano (AN)



OPERATION INSTRUCTION

1.Clock Setting

When the microwave oven is electrified, the oven will display "0:00", buzzer will ring once.

- 1) Press " (2)/(1)" once. "00:00" displays.
- 2) Turn " to adjust the hour figures, the input time should be within 0--23(24-hour).
- 3) Press " ()/() ", the minute figures will flash.
- 4) Turn "y" to adjust the minute figures, the input time should be within 0--59.
- 5) Press " ('' will flash.

Note: 1) If the clock is not set, it would not function when powered.

2) During the process of clock setting, if you press " , the oven will go back to the previous status automatically.

2. Microwave Cooking

Press " the LED will display

"P100". Press " ** " for times or

turn "P100", "P30" or "P10" will display for each added press. Then press " to confirm, and

turn " \mathbb{Q}_h " to set cooking time from 0:05 to 95:00.

Press " (START) " again to start cooking.

Example: If you want to use 80% microwave power to cook for 20 minutes, you can operate the oven as the following steps.

- 1) Press " start " once, the screen display "P100".
- 3) Press " to confirm, and the screen displays "P 80".
- 4) Turn "On" to adjust the cooking time until the oven displays "20:00".
- 5) Press "(START) " to start cooking .

3. Grill or Combi. Cooking

Press " **ﷺ** " the LED will display

"G", and press the same button for times or turn the "Ty" to choose the power you want, and "G","C-1" or

"C-2" will display for each added press. Then press

" (START) " to confirm, and turn " to set cooking time from 0:05 to 95:00. Press " (START) start cooking.

START) " again to

Example:

If you want to use 55% microwave power and 45% grill power(C-1) to cook for 10 minutes, you can operate the oven as the following steps.

- 1) Press " once, the screen display "P100".
- 2) Press " ** " for timers or turn " to choose combi. 1 mode.
- 3) Press " (START) " to confirm, and the screen displays "C-1".
- 4) Turn "\" to adjust the cooking time until the oven displays "10:00".
- 5) Press " (START)" to start cooking .

Note: If half the grill time passes, the oven sounds twice, and this is normal. In order to have a better effect of grilling food, you should turn the food over close the door, and then press " (START)" to continue cooking. If no operation, the oven will continue working.

4. Quick Start

- 1) In waiting state, Press " (START)" to start cooking with 100% power, each added press will increase 30 seconds cooking time up to 95 minutes.
- 2) In microwave cooking or time defrost state, each press of " (START)" can increase 30 seconds of cooking time.
- 3) In waiting state, turn " left to set cooking time with 100% microwave power, then press " (START)" to start cooking.

5. Defrost By Weight

- 1) Press " O/ O once, and the oven will display "dEF1".
- 2) Turn "to select the weight of food from 100 to 2000 g.
- 3) Press " (START) " to start defrosting.

" ₩ " Pad instructions

Order	Display	Microwave Power	Grill Power
1	P100	100%	
2	P80	80%	
3	P50	50%	
4	P30	30%	
5	P10	10%	
6	G	0%	100%
7	C-1	55%	45%
8	C-2	36%	64%

6. Defrost By Time

- 1) Press " O/D 7 " twice, and the oven will display "dEF2".
- 2) Turn "On" to select the defrost time. The MAX time is 95 minutes.
- 3) Press " start defrosting.

 The defrost power is P30 , and it will not be changed.

7. Kitchen Timer

- (1) Press " (2) / (1) " twice, LED will display 00:00, timer indicator will light.
- (2) Turn "\[\frac{1}{2} \]" to enter the correct time.(The maximum cooking time is 95 minutes.)
- (3) Press " TART " to confirm setting, timer indicator will be lighted.
- (4) When the kitchen time is reached, timer indicator will go out. The buzzer will ring 5 times. If the clock be set (24-hour system), LED will display the current time.

Note: The kitchen Time is differ from 24-hour system. Kitchen Timer is a timer.

8. Inquiring Function

- (1) In states of microwave, grill and combination cooking, press " ", the current power will be displayed for 3 seconds. After 3 seconds, the oven will turn back to the former state;
- (2) In cooking state, press " (2) \(\bigcup \) " to inquire the time and the time will display for 3 seconds.

9. Auto Menu

- 1) Turn " right to choose the menu, and "A-1" to "A-10" will display.
- 2) Press " (START)" to confirm.
- 3) Turn " to choose the default weight as the menu chart.
- 4) Press " (START) " to start cooking.

Example: If you want to use "Auto Menu" to cook fish for 350g.

- 1) Turn "V" clockwise till "A-4" display.
- 2) Press " (START)" to confirm.
- 3) Turn " " to select the weight of fish till "350" display.
- 4) Press " (START)" to start cooking.

 
10. Multi-section cooking

At most 2 sections can be set for cooking. In multi-section cooking, if one section is defrosting, then defrosting shall be placed in the first section.

Example: If you want to defrost food for 5 minutes and then cook with 80% microwave power for 7 minutes, operate it as the following:

- 1) Press " O/B $\stackrel{\times}{\circ}$ " twice, and the oven will display "dEF2".
- 2) Turn " to select the defrost time till "5:00" display.
- 4) Press " 🕽 " once again or turn " h" to choose

80% microwave power.



- 6) Turn "\" to adjust the cooking time till the oven displays "7:00".
- 7) Press " (START) " to start cooking, and buzzer will sound once for the first section, defrosting time counts down; buzzer will sound once again entering the second cooking. when cooking finish, buzzer sounds five times.

11. Lock-out Function for Children

Lock: In waiting state, press " (RAUSE) " for 3 seconds, there will be a long beep denoting entering the children-lock state and current time will display if the time has been set, otherwise, the LED will display "C = 3".

Lock quitting: In locked state, press " (RAUSE) " for 3

seconds, there will be a long "beep" denoting that the lock is released.

The menu chart:

Menu	Weight (g)	Display
A1	200 g	200
PIZZA	400 g	400
	200 g	200
A2 Potato	400 g	400
	600 g	600
	250 g	250
A3 Meat	350 g	350
	450 g	450
A4	250 g	250
Fish	350 g	350
	450 g	450
A5	200 g	200
Vegetable	300 g	300
	400 g	400
A6	1 cup (120 ml)	1
Beverage	2 cups (240 ml)	2
	3 cups (360ml)	3
A7	50g(with 450 ml cold water)	50
Pasta	100g(with 800 ml cold water)	100
A8 Popcorn	50 g	50
Ао Рорсоп	100 g	100
	400	400
A9 Chicken	800	800
	1200	1200
	200	200
A-10 Reheat	400	400
	600	600

TROUBLE SHOOTING

Normal				
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.			
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.			
Steam accumulating on door, hot air out of vents	In cooking, steam may can out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.			
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.			

Trouble	Possible Cause	Remedy
	(1) Power cord not plugged in tightly	Unplug. Then plug again after 10 seconds.
Oven cannot be started	(2) Fuse blowing or circuits breaker works.	Replace fuse or reset circuits breaker (repaired by professional personnel of your company)
	(3) Trouble with outlet	Test outlet with other electrical appliances.
Oven does not head	(4) Door not closed well	Close door well
Glass turntable makes noise when microwave oven operates	(5) Dirty roller rest and oven bottom	Refer to "Maintenance of Microwave" to clean dirty parts.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

Installation Instruction

Please Read the Manual Carefully Before Installation

Please Note Electrical connection

The oven is fitted with a plug and must be only connected to a properly installed earthed socket. In accordance with the appropriate regulations, the socket must only be installed and the connecting cable must only be replaced by a qualified electrician.


If the plug is no longer accessible following installation and all-pole isolating switch must be present on the installation side with a contact gap at least 3mm. The fitted cabinet must not have a back wall behind the appliance.


Minimum installation ventilation slots and suction holes.

Note:

Do not trap or bend the power cable.


A. Built-in furniture

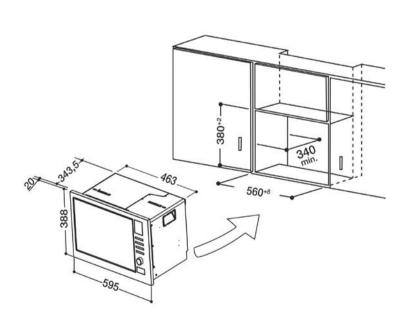

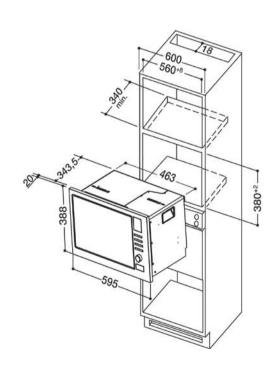


B.Prepare the cabinet


1. Read the instruction on the BOTTOM CANINET TEMPLATE, put the template on the bottom plane of cabinet.

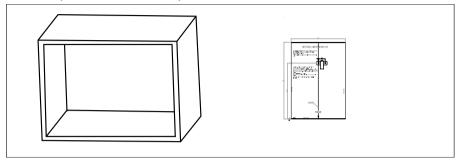


2. Make the marks on the bottom plane of cabinet according to marks"a" of of the template

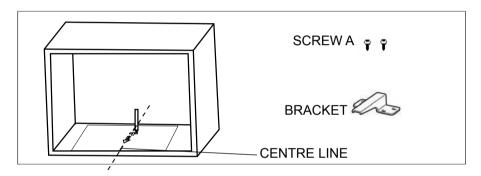


3. Remove the bottom cabinet template and fix the bracket with screw A.

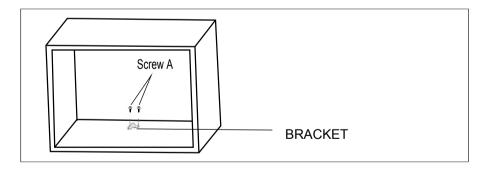

C.Install the oven

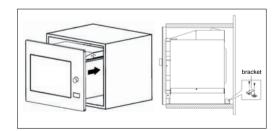

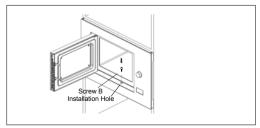

- 4. Install the oven to the cabinet
 - Make sure the back of the oven is locked by bracket.
 - Do not trap or kink the power cord.
- 5. Open the door, fix the oven to the cabinet with Screw B, at the installation hole.

PN:261800311958