




 **ARISTON**

 **CHEF PLUS**

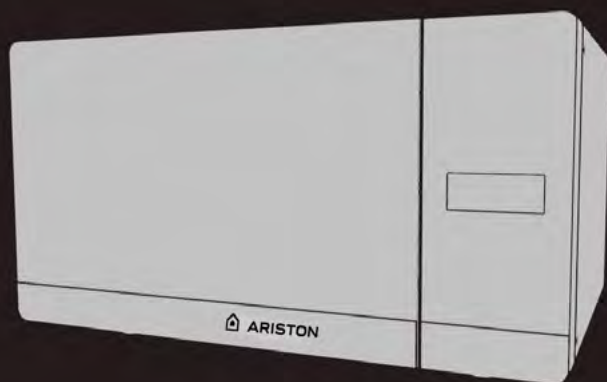

EN Operating Instructions

INSTALLATION

Prior to connecting



Check that the voltage on the rating plate corresponds to the voltage in your home.

- Do not remove the microwave inlet protection plates located on the side of the oven cavity wall. They prevent grease & food particles from entering the microwave inlet channels.
- Place the oven on a stable, even surface that is strong enough to hold the oven and the food utensils you put in it. Use carefully when handling.
- Position the oven at a distance from other heating sources. **For sufficient ventilation there must be a space of at least 30 cm** above the oven. Ensure that the space underneath, above and around the oven is empty to allow for proper airflow. **The microwave oven shall not be placed in a cabinet.**
- Ensure that the appliance is not damaged. Check the oven door closes firmly against the door support. Empty the oven and clean the interior with a soft, damp cloth.



Do not operate this appliance if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces. Electrical shock, fire or other hazards may result.

- Do not use extension cord: If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.



This appliance **MUST** be Earthed or this could result in the risk of electric shock. It **MUST** be connected to a properly installed earthed socket or fused earthed switched spur. Consult a qualified electrician or serviceman if the earthing instructions are not completely understood, or if doubt exists as to whether the microwave oven is properly earthed.

AFTER CONNECTING

- The oven can be operated only if the oven door is firmly closed.
- Poor television reception and radio interference may result if the oven is located close to a TV, radio or aerial.
- The earthing of this appliance is compulsory. The manufacturer will accept no responsibility for in-

jury to persons, animals or damage to objects arising from the non-observance of this requirement.

- The manufacturers are not liable for any problems caused by the user's failure to observe these instructions.

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

- Do not heat, or use flammable materials in or near the oven. Fumes can create a fire hazard or explosion.
- Do not use your microwave oven for drying textiles, paper, spices, herbs, wood, flowers, fruit or other combustible materials. This could result in fire.
- Metallic containers for food and beverages are not allowed during microwave cooking.
- Care should be taken not to displace the turntable when removing containers from the appliance.
- If material inside / outside the oven should ignite or smoke is emitted, keep oven door closed and turn the oven off. Disconnect the power cord or shut off power at the fuse or circuit breaker panel.
- Do not over-cook food. This could result in fire.
- Do not leave the oven unattended, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn and some plastics can melt if used when heating foods. Do not leave the oven unattended if you are using a lot of fat or oil since they can overheat and cause a fire!
- Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.

- Do not hang or place heavy items on the door as this can damage the oven opening and hinges. The door handle should not be used for hanging things on.
- The Microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play

with the appliance.

- Do not use your microwave oven for heating anything in airtight sealed containers. The pressure increases and may cause damage when opening or may explode.
- The door seals and the door seal areas must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by a trained service technician.
- The appliances are not intended *to be operated by means of an external timer or separate remote-control system.*
- Do not use your microwave oven for cooking or reheating whole eggs with or without shell since they may explode even after microwave heating has ended.

PRECAUTIONS GENERAL

- This appliance is intended to be used in household and similar applications such as :
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential environments;
 - Bed and breakfast type environments.
 No other use is permitted (e.g. heating rooms).
- The appliance should not be operated without food in the oven when using microwaves. Operation in this manner is likely to damage the appliance.

- The ventilation openings on the oven must not be covered. Blocking the air intake or exhaust vents may cause damage to the oven and poor cooking results.
- If you practice operating the oven, put a glass of water inside. The water will absorb the microwave energy and the oven will not be damaged.
- Do not store or use this appliance outdoors.
- Do not use this product near a kitchen sink, in a wet basement, or near a swimming pool, or similar.
- Do not use the cavity for any storage purposes.
- Remove wire twist-ties from paper or plastic bags before placing bag in the oven.

DEEP-FRYING

- Do not use your microwave oven for deep-frying, because the oil temperature cannot be controlled.
- Use hot pads or oven mitts to prevent burns, when touching containers, oven parts, and pan after cooking. Accessible parts may become hot during use, young children should be kept away.

LIQUIDS

- e.g. beverages or water. Overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid.
- To prevent this possibility the following steps should be taken:
 1. Avoid using straight-sided containers with narrow necks.
 2. Stir the liquid before placing the container in the oven and let the teaspoon remain in the container.
 3. After heating, allow standing for a short time, stirring again before carefully removing the container from the oven.
- After heating baby food or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving. This will ensure that the heat is evenly distributed and the risk of scalding or burns can be avoided.
- Ensure the Lid and the Teat is removed before heating!

ACCESSORIES GENERAL

There are a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use.


Ensure that the utensils you use are oven proof and allow microwaves to pass through them before cooking. When you put food and accessories in the microwave oven, ensure that they do not come in contact with the interior of the oven.

This is especially important with accessories made of metal or metal parts.

If accessories containing metal comes in contact with the oven interior, while the oven is in operation, sparking can occur and the oven could be damaged.

Always ensure that the turntable is able to turn freely before starting the oven. If the turntable isn't able to turn freely you should use a smaller vessel.

TURNTABLE SUPPORT



Use the turntable support under the Glass turntable. Never put any other utensils on the turntable support.

- Fit the turntable support in the oven.

GLASS TURNTABLE



Use the Glass turntable with all cooking methods. It collects the dripping juices and food particles that otherwise would stain and soil the interior of the oven.

- Place the Glass turntable on the turntable support.

WIRE RACK



Use the Wire Rack when cooking with Grill or Combi grill.

CRISP PLATE



Place the food directly on the Crisp Plate. The Crisp Plate may be preheated before use (max. 3 min.).

Always use the Glass Turntable as support when using the Crisp Plate.

Do not place any utensils on the Crisp Plate since it will quickly become very hot and is likely to cause damage to the utensil.

CRISP HANDLE



Use the Crisp Handle to remove the hot Crisp Plate from the oven.

PLATE COVER (accessory sold separately)

The Cover is used to cover food during cooking and reheating with microwaves only and helps to reduce spattering, retain food moisture as well as reducing the time needed. Use the cover for two level reheating.



MAINTENANCE & CLEANING

Cleaning is the only maintenance normally required. It must be carried out with the microwave oven disconnected.

Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

Do not use metal scouring pads, abrasive cleansers, steel-wool pads, gritty washcloths, etc. which can damage the control panel, and the interior and exterior oven surfaces. Use a cloth with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel.

Do not spray directly on the oven. At regular intervals, especially if spills have occurred, remove the turntable, the turntable support and wipe the base of the oven clean.

This oven is designed to operate with the turntable in place.

Do not operate the microwave oven when the turntable has been removed for cleaning.

Use a soft and damp cloth with mild detergent to clean the interior surfaces, front and rear of the door and the door opening.

Do not allow grease or food particles to build up around the door.

For stubborn stains, boil a cup of water in the oven for 2 or 3 minutes. Steam will soften the marks.

Adding some lemon juice to a cup of water, placing this on the turntable and boiling for a few minutes can eliminate odors inside the oven.

Do not use steam cleaning appliances when cleaning your microwave oven.

The oven should be cleaned regularly and any food deposits removed.

The ceiling beneath it may need regular cleaning. This should be done with a soft and damp cloth with mild detergent.

DISHWASHER SAFE:

- Turntable Support
- Wire Rack
- Crisp Handle
- Glass Turntable

TROUBLE SHOOTING GUIDE

If the oven does not work, do not make a service call until you have made the following checks:


- The Turntable and turntable support is in place.
- The Plug is properly inserted in the wall socket.
- The Door is properly closed.
- Check your Fuses and ensure that there is power available.
- Check that the oven has ample ventilation.
- Wait for 10 minutes, then try to operate the oven once more.
- Open and then close the door before you try again.

This is to avoid unnecessary calls for which you will be charged. When calling for Service, please give the serial number and type number of the oven (see Service label). Consult your warranty booklet for further advice.


⚠ If the mains cord needs replacing it should be replaced by the original mains cord, which is available via our service organization. The mains cord may only be replaced by a trained service technician.

⚠ Service only to be carried out by a trained service technician. It is hazardous for anyone other than a trained person to carry out any service or repair operation, which involves the removal of any cover, which gives protection against exposure to microwave energy. Do not remove any cover.

MWA 25 B

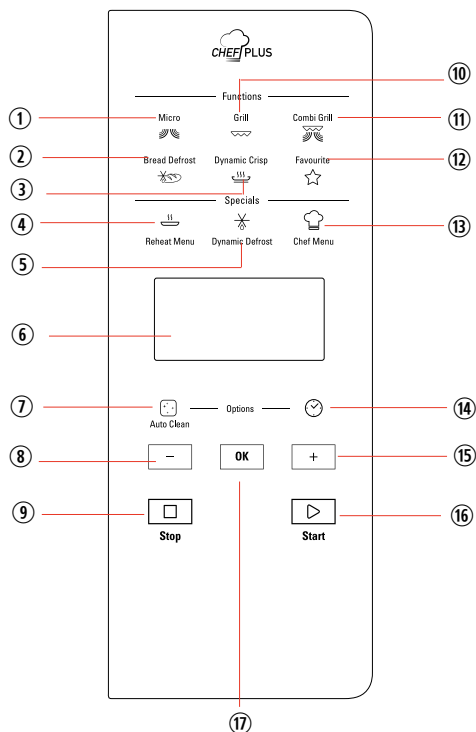

- ① Microwave button
- ② Bread Defrost button
- ③ Crisp button
- ④ Jet Reheat Menu button
- ⑤ Jet Defrost Menu button
- ⑥ Display
- ⑦ Auto clean button
- ⑧ Minus button
- ⑨ Stop button
- ⑩ Grill button
- ⑪ Combi Grill button
- ⑫ Favourite button
- ⑬ Chef menu button
- ⑭ Clock button
- ⑮ Plus button
- ⑯ Jet Start button
- ⑰ OK button

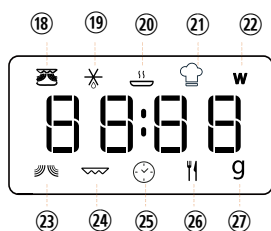

- ⑱ Crisp icon
- ⑲ Jet Defrost Menu icon
- ⑳ Jet Reheat Menu icon
- ㉑ Chef Menu icon
- ㉒ Microwave power (watt)
- ㉓ Microwave icon
- ㉔ Grill icon
- ㉕ Clock setting / Time selection icon
- ㉖ Food Type selection icon
- ㉗ Weight (grams) icon



STAND-BY MODE

The oven is in Stand-by mode when the clock is displayed (or, if the clock has not been set, when the display will show “.”).



START PROTECTION / CHILD LOCK

This automatic safety function is activated one minute after the oven has returned to “Stand-by mode”.

When the safety function is active the door must be opened and closed in order to start the cooking, otherwise the display will show “door”.

door



PAUSE OR STOP COOKING

To pause cooking:

The cooking can be paused to check, turn or stir the food by opening the door. The setting will be maintained for 5 minutes.

To continue cooking:

Close the door and press the Jet Start button ONCE. The cooking is resumed from where it was paused.

If you don't want to continue cooking you can: Remove the food, close the door and press the Stop button.

When the cooking is finished:

A beep will signal once a minute for 10 minutes when the cooking is finished. Press the Stop button or open the door to cancel the signal.



ADD / STIR / TURN FOOD

Depending on the selected function, it could be needed to add / stir / turn food during cooking. In these cases the oven will pause cooking and it will ask you to perform the needed action. When required, you should:

1. Open the door.
2. Add / Stir / Turn the food (depending on the required action).
3. Close the door and restart by pressing the Jet Start button.



- If the door is not opened within 2 minutes since the request to Add food, the oven will stop and it will go in Stand-by mode.
- If the door is not opened within 2 minutes since the request to Stir or Turn the food, the oven will continue the cooking process (in this case the final results may not be the optimal ones).



CLOCK

To set the Clock of your appliance:

1. Press the Clock button.
2. Press the Plus/Minus buttons to set the hours.
3. Press the OK/Jet Start. The minutes will start blinking.
4. Press the Plus/Minus buttons to set the minutes.
5. Press the OK/Jet Start button. The clock is set.

Note:

The first time the appliance is plugged in (or after a power failure), the product will automatically enter the Clock Setting mode; in this case, please follow the above procedure starting from step No.2.



- If the clock has not been set after plug in, the clock will show “12:00”.
- During the setting of the clock, if you press the Stop button or if the setting is not completed after a long time, the oven will exit from setting mode and the setting will be invalid, display will show “.”.



JET START

This function allows to start the Microwave function at maximum power (800 watt) for 30 seconds, simply pressing the Jet Start button. It is suggested for quick reheating of food with a high water content such as clear soups, coffee or tea.

1. Press the Jet Start Button.

Pressing the Jet Start button the Microwave function will start at maximum microwave power (800 Watt) for 30 seconds.

Each additional pressing will increase the cooking time of 30 seconds.

If you have already selected a cooking function (e.g.: Grill), press Jet Start to start the selected function.



• It is possible to change the power level and the duration time even after the cooking process has been already started. To adjust the power level, simply press the Microwave button repeatedly. To change the duration time, please press the Plus/Minus buttons, or press the Jet Start button to increase the duration time of 30 seconds.



AUTO CLEAN

This automatic cleaning cycle will help you to clean the microwave oven cavity and to remove unpleasant odors.

BEFORE STARTING THE CYCLE:

1. Put 235ml water into a container (see our recommendations in the below section).
2. Place the container directly on the middle of Glass Turntable.



TO START THE CYCLE:

3. Press the Auto Clean button, the cleaning cycle duration will be visible on the display.
4. Press the Jet Start button to start the function.

WHEN THE CYCLE IS FINISHED, a beep will signal once every 10 seconds for 10 minutes when the cleaning cycle is finished.

5. Press the Stop button or open the door to cancel the signal.
6. Remove the container.
7. Use a soft cloth or a paper towel with mild detergent to clean the interior surfaces.



• For a better cleaning result, it is recommended to use a container with a diameter of 17- 20cm, and a height that is lower than 6.5cm.

- It is recommended to use a container of light plastic material that is suitable for the microwave.
- As the container will be hot after the cleaning cycle is complete, it is recommended to use a heat resistant glove when removing the container from the microwave.
- For a better cleaning effect and removal of unpleasant odors, add some lemon juice to the water.
- The Grill element does not need cleaning since the intense heat will burn off any splashes, but the ceiling beneath it may need regular cleaning. This should be done with a soft and damp cloth with mild detergent.
- If the Grill is not used regularly, it should be run for 10 minutes a month to burn off any splashes, in order to reduce the risk of fire.



MICROWAVE

Microwave function allows to quickly cook or re-heat food and beverages.

1. Press the Microwave button. The maximum power level (800 W) will be shown on the display and the watt icons starts blinking.
2. Press Plus/Minus buttons to set the power.
3. Press the OK button to confirm.
4. Press Plus/Minus buttons to set the cooking time.
5. Press the OK/Jet Start button. The function will start.

Once the cooking process has been started:

- To adjust the power: press the Microwave button then press the Plus/Minus button to adjust the value.
- To increase time/decrease time: press the Plus/Minus buttons, or press Jet Start button to increase the cooking time of 30 seconds.

POWER	SUGGESTED USE:
800 W	Reheating of beverages, water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power.
650 W	Cooking of fish, meat, vegetables etc.
500 W	More careful cooking e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
350 W	Simmering stews, melting butter.
160 W	Defrosting.
90 W	Softening ice cream, butter and cheeses. keep warming.



GRILL

This function uses a powerful quartz grill to brown foods, creating a grill or a gratin effect.

Grill function allows to brown foods like cheese toast, hot sandwiches, potato croquettes, sausages, vegetables.

1. Press the Grill button.
2. Press Plus/Minus buttons to set the cooking time.
3. Press the OK/Jet Start button. The function will start.



- For food like cheese, toast, steaks and sausages, place food on the high Wire Rack.
- Ensure that the utensils used are heat resistant when you use this function.
- Do not use plastic utensils when grilling. They will melt. Items of wood or paper are not suitable either.
- Be careful, not to touch the ceiling beneath the grill element.



COMBI GRILL

This function combines Microwave and Grill heating, allowing you to cook gratin in less time.






1. Press the Combi Grill button.
2. Press Plus/Minus buttons to set the Microwave power (see the table below).
3. Press the OK button to confirm.
4. Press Plus/Minus buttons to set the cooking time.
5. Press the OK/Jet Start button. The function will start.

Once the cooking process has been started:

- To adjust the power: press the Microwave button then press the Plus/Minus button to adjust the val-

ue.

- To increase time/decrease time: press the Plus/Minus buttons, or press Jet Start button to increase the cooking time of 30 seconds.

POWER LEVEL	SUGGESTED USE:	
650 W		Vegetables
500 W		Poultry
350 W		Fish
160 W		Meat
90 W		Gratined Fruit



- Do not leave the oven door open for long periods when the Grill is in operation, as this will cause a drop in temperature.
- If you cook large gratins which require stopped turn-table rotation, then turn the dish after approximately half the cooking time. This is necessary for getting colour on the whole top surface.
- Ensure that the utensils used are microwave safe and heat resistant when you use this function.
- Do not use plastic utensils when grilling. They will melt. Items of wood or paper are not suitable either.
- Be careful, not to touch the ceiling beneath the grill element.
- If you cook large food such as poultry, please use microwave and oven safe dish, put the dish on turn-table directly.



BREAD DEFROST

This exclusive Whirlpool function allows you to defrost frozen bread.

Combining both Defrost and Crisp technologies, your bread will taste and feel as if it were freshly baked.

Use this function to quickly defrost and heat frozen rolls, baguettes & croissants.

Bread Defrost can be used if the net weight is between 50g-500g.

The following accessories must be used with this function:

- the Crisp Plate
- the Crisp Handle to manage the hot Crisp Plate.

1. Press the Bread Defrost button.
2. Press Plus/Minus buttons to select the weight.
3. Place the empty Crisp Plate on the Glass Turntable, close the door and press the OK/Jet Start button. The display will show "PRE HEAT" and the oven will use Microwaves and Grill in order to preheat the Crisp Plate. When the temperature will be reached, a message ("ADD") will inform you that you can add your bread.
4. Place your bread on the Crisp Plate, close the door and press the OK/Jet Start button. The function will start.



- Ensure that the Crisp Plate is correctly placed in the middle of the Glass Turntable.
- The oven and the Crisp Plate become very hot when using this function.
- Do not place the hot Crisp Plate on any surface susceptible to heat.
- Use oven mittens or the Crisp Handle when removing the hot Crisp Plate.
- **Only use the provided Crisp Plate with this function. Other available Crisp Plates on the market will not give the correct result when using this function.**

• For details requested to add / stir / turn food, see table in page 7.



CRISP

This exclusive Whirlpool function allows for perfectly golden brown results both on the top and bottom surfaces of the food. Using both Microwave and Grill cooking, the Crisp Plate will rapidly reach the right temperature and begin to brown and crisp the food.

The following accessories are designed to be used with the Crisp function:

- the Crisp Plate
- the Crisp Handle to manage the hot Crisp Plate.

Use this function to reheat and cook pizzas, quiches, and other dough based food. It is also good for frying bacon and eggs, sausages, potatoes, french fries, hamburgers and other meats etc. without adding oil (or by adding only a very limited quantity of oil).

1. Press the Crisp button.
2. Press Plus/Minus buttons to set the cooking time.
3. Press the OK/Jet Start button. The function will start.

Use only the provided Crisp Plate with this function. Other available Crisp Plates on the market will not give the correct result when using this function.



- Ensure that the Crisp Plate is correctly placed in the middle of the Glass Turntable.
- The oven and the Crisp Plate become very hot when using this function.
- Do not place the hot Crisp Plate on any surface susceptible to heat.
- Be careful, not to touch the ceiling beneath the Grill element.
- Use oven mittens or the Crisp Handle when removing the hot Crisp Plate.
- Before cooking food that does not require a long cooking time (pizza, cakes...), we recommend to pre-heat the Crisp Plate 2-3 minutes in advance.



JET DEFROST MENU

This function allows you to quickly defrost food automatically.

Use this function to defrost Meat, Poultry, Fish, Vegetables and Bread.

1. Press the Jet Defrost Menu button.
2. Press the Plus/Minus buttons to set the food type (see the below table) and press the OK button to confirm.
3. Press Plus/Minus buttons to set the food weight.
4. Press the OK/Jet Start button. The defrosting cycle will start. The duration of the function will be automatically calculated on the basis of the selected food and weight.

In order to achieve the best possible results the product will ask you to turn/stir the food when needed. See "Add / Stir/ Turn food" chapter on page 7.



• Arrange the thicker, denser food to the center of the plate and the thinner or less dense food the outside of the plate. Place thin slices of meat on top of each other or interlace them.







• **For food not listed in this table and if the weight is less or more than recommended weight, you should choose manual function with lower microwave power (like microwave 160W).**

• Due to food variability, the cooking duration is set on an average shape, we always recommend to check the internal doneness of food and in case prolong the cooking time to achieve proper doneness.

• Waiting 1-2 minutes before serving the reheated food will improve the results, especially for frozen food.

• Plastic foil should be scored or pricked with a fork, to relieve the pressure and to prevent bursting, as steam builds-up during cooking.

• Place food onto a microwave safe and heatproof dinner plate or dish.

FOOD TYPE		WEIGHT	SUGGESTED USE
P1	 Minced meat	100g - 2000g	Minced meat, cutlets, steaks or roasts. After cooking, allow food to rest for at least 5 minutes for better results.
P2	 Poultry	100g - 2500g	Whole chicken, pieces or fillets. After cooking, allow food to rest for 5-10 minutes for better results.
P3	 Fish	100g - 1500g	Whole, steaks or fillets. When finish cooking, allow food to rest for 5 minutes for better results.
P4	 Vegetables	100g - 1500g	Larger, medium and small cut vegetables. Before serving, allow food to rest for 3-5 minutes for better results.
P5	 Bread (standard)	100g - 550g	Frozen rolls, baguettes & croissants. Allow food to rest for 5 minutes for better results.
P6	 Bread Defrost* (using Crisp Plate)	50g - 500g	The exclusive Whirlpool function to defrost frozen bread. Combining both Defrost and Crisp technologies, your bread will taste and feel as if it were freshly baked. Use this function to quickly defrost and heat frozen rolls, baguettes & croissants. Place the empty Crisp Plate on the Glass Turntable, close the door, then select the Bread Defrost program, set the bread weight and press the OK button. The display will show "PRE HEAT" and the oven will use Microwaves and Grill in order to preheat the Crisp Plate. When the temperature will be reached, a message ("ADD") will inform you that you can add your bread. Place your bread on the Crisp Plate, close the door and press the Jet Start button. The function will start, turn food when oven prompts.



JET REHEAT MENU

This function allows you to automatically reheat your dishes.






Use this function to reheat: soup, sauce, chilled pizza, plated meal, beverage.

1. Press the Jet Reheat Menu button.
2. Press the Plus/Minus buttons to set the food class (see the below table) and press the OK button to confirm.
3. Press Plus/Minus buttons to set the food weight.
4. Press the OK/Jet Start button. The reheating cycle will start. The duration of the function will be automatically calculated on the basis of the selected food and weight.

Note: after a certain time, the display could ask you to add / stir / turn the food for a better reheat. See "Add / Stir / Turn food" chapter on page 7.



- Arrange the thicker, denser food to the center of the plate and the thinner or less dense food the outside of the plate.
- Place thin slices of meat on top of each other or interlace them.
- Due to food variability, the cooking duration is set on an average shape, we always recommend to check the internal doneness of food and in case prolong the cooking time to achieve proper doneness.
- Waiting 1-2 minutes before serving the reheated food will improve the results, especially for frozen food.
- Plastic foil should be scored or pricked with a fork, to relieve the pressure and to prevent bursting, as steam builds-up during cooking.
- Place food onto a microwave safe and heat-proof dinner plate or dish.

	FOOD TYPE	WEIGHT	HINT
P1	 Soup	250 - 1000g	Cover the dish, leaving an air ventilation. Stir the food when prompted by the microwave. Allow to rest for 3 minutes before serving.
P2	 Sauce	250 - 1000g	Cover the dish, leaving an air ventilation. Stir the food when prompted by the microwave. Allow to rest for 3 minutes before serving.
P3	 Chilled pizza	200 - 600g	Remove the pizza from the package, arrange the pizza on a microwave safe dish. Stacking multiple pizzas is not recommended.
P4	 Dinner plate	250 - 350g	Cover the dish, leaving an air ventilation. Allow to rest for 3 minutes before serving.
P5	 Beverage	150ml - 600ml	Put a metal spoon in the cup to prevent over cooking.



CHEF MENU

A selection of automatic recipes with pre-set cooking parameters values to offer optimal cooking results.

1. Press the Chef Menu button.
2. Press and hold Plus/Minus buttons to select the food type (see the below table).
3. Press the OK button to confirm.
4. Depending on the food class, the display could ask you to set the Weight. Use the Plus/Minus buttons to set the asked values.
5. Press the OK/Jet Start button. The function will start.












The duration of the function will be automatically calculated on the basis of the selected food and weight.



• For large amounts/pieces of food like roasts and oven baked fish a standing time of 8 - 10 minutes is recommended.

• For food like vegetables, hot dogs and steamed fish recommended standing time is 2 - 3 minutes.

• For details requested to add/stir/turn food, see table in page 7.

RECIPE	INITIAL STATE	WEIGHT AMOUNT	DURATION	PREPARATION
1  Popcorn	Room temperature	100g	3min	Place bag on turntable. Only pop one bag at a time.
2  Rice Mixed	Frozen	300-650g	6-11min	Remove the food package. Put the food in a microwave safe dish, stir the rice when oven prompts
3  Pasta Mixed	Frozen	250-550g	5-10min	Remove the food package, Put the food in a microwave safe dish, stir the food when oven prompts
4  Mixed Vegetables	Frozen	150-600g	4-12min	Put the food in a microwave safe dish, Add 2 tablespoons water to food. Stir the food when oven prompts
5  Frozen Lasagna	Frozen	300-600g	14-18min	Remove any aluminum foil, put food in a microwave and oven safe dish, then put in the oven.
6  Buffalo wings / Chicken nuggets	Frozen	250-500g	8-12min	Remove package. Put food in the Crisp Plate. Turn food when oven prompts
7  French fries	Frozen	250-500g	10-22min	Put the food into Crisp Plate. Stir food when oven prompts
8  Frozen Pizza	Frozen	250-750g	7-12min	Remove package, put food in the Crisp Plate.
9  Quiche	Room temperature	950g	19min	Prepare the ready made pastry 370g, line the Crisp Plate with the pastry. Prick it. Put it in the oven and preheat the plate. Prepare the stuffing: 4 eggs, 150ml crème fraîche, 100g diced bacon, 130g (3½dl) grated cheese (Gruyere or similar), black pepper and ground nutmeg for season. Mix all the ingredients. When oven prompts, add the stuffing, Place back into the oven and continue the cooking.
10  Breaded fish/ Fish sticks	Frozen	250-500g	8-11min	Lightly grease the Crisp Plate. Add food when Crisp Plate is preheated. Turn food when oven prompts.
11  Cordon Bleu/ Chicken Cutlets	Frozen	100-400g	5-11min	Lightly grease the Crisp Plate. Add food when Crisp Plate is preheated. Turn food when oven prompts.



FAVOURITE

The Favourite function provides you with an easy way to quickly store and recall a favourite cooking cycle.

TO SAVE a Favourite:

1. Select a cooking function and its parameters (e.g.: watt, type of food, weight...) **without starting the cooking cycle.**
2. Press and hold for a few seconds the Favourite button.
3. A beep will be played and the function will be stored.

Note: it is possible to replace an existing Favourite with a new one, repeating the above procedure.

TO RECALL a Favourite:

1. Press the Favourite button.

Note: when the appliance is plugged in or after a power failure, your Favourite function will be reset to default value (i.e.: Microwave function, 800W, 2 minutes).



• If some parameters (i.e.: type of food, weight...) have not been selected when the Favourite has been saved, the Favourite will store the default value of the selected cooking function.

• For details requested to stir/turn food, see "Add / Stir / Turn food" chapter on page 7.

TECHNICAL SPECIFICATION

Supply Voltage	240 V/50 Hz
Rated Input Power	1750 W
Outer dimensions (HxWxD)	310X 520 X 390
Inner dimensions (HxWxD)	222 x 336 x 331

Recycling and Disposal Information

As part of Hotpoint's continued commitment to helping the environment, Hotpoint reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage.

Please dispose of packaging and old products carefully.

Register your new product and receive 1 additional year FREE!

As an additional benefit of owning your Hotpoint product, we are offering 1 years additional free guarantee. To be eligible for this you will need to contact us to register your product within 28 days of purchase. If you do not register your appliance within the 28 days you will still be entitled to 1 years manufacturer's guarantee. Please refer to the certificate of guarantee for more information.

DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European Directive 2012/19/UE on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream.



Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



MWA 25 B